



**YAMAHA**

**XVS650A**

**2001**

**5BN4-AE2**

**SUPPLEMENTARY  
SERVICE MANUAL**



---

## FOREWORD

This Supplementary Service Manual has been prepared to introduce new service and data for the XVS650A 2001. For complete service information procedures it is necessary to use this Supplementary Service Manual together with the following manual.

**XVS650 '97 SERVICE MANUAL: 4VR-AE1**  
**XVS650A '98 SUPPLEMENTARY SERVICE MANUAL: 5BN4-AE1**

**XVS650A 2001  
SUPPLEMENTARY  
SERVICE MANUAL**  
© 2000 by Yamaha Motor Co., Ltd.  
First Edition, October 2000  
All rights reserved. Any reproduction or  
unauthorized use without the written  
permission of Yamaha Motor Co., Ltd.  
is expressly prohibited.

## NOTICE

This manual was produced by the Yamaha Motor Company primarily for use by Yamaha dealers and their qualified mechanics. It is not possible to include all the knowledge of a mechanic in one manual, so it is assumed that anyone who uses this book to perform maintenance and repairs on Yamaha motorcycles has a basic understanding of the mechanical ideas and the procedures of motorcycle repair. Repairs attempted by anyone without this knowledge are likely to render the motorcycle unsafe and unfit for use.

Yamaha Motor Company, Ltd. is continually striving to improve all its models. Modifications and significant changes in specifications or procedures will be forwarded to all authorized Yamaha dealers and will appear in future editions of this manual where applicable.

---

### NOTE:

Designs and specifications are subject to change without notice.

---

## IMPORTANT INFORMATION

Particularly important information is distinguished in this manual by the following notations.



The Safety Alert Symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!



Failure to follow WARNING instructions could result in severe injury or death to the motorcycle operator, a bystander or a person inspecting or repairing the motorcycle.

### CAUTION:

A CAUTION indicates special precautions that must be taken to avoid damage to the motorcycle.

### NOTE:

A NOTE provides key information to make procedures easier or clearer.

# HOW TO USE THIS MANUAL

## MANUAL ORGANIZATION

This manual consists of chapters for the main categories of subjects. (See “Illustrated symbols”)

- 1st title ①: This is the title of the chapter with its symbol in the upper right corner of each page.
- 2nd title ②: This title indicates the section of the chapter and only appears on the first page of each section. It is located in the upper left corner of the page.
- 3rd title ③: This title indicates a sub-section that is followed by step-by-step procedures accompanied by corresponding illustrations.

## EXPLODED DIAGRAMS

To help identify parts and clarify procedure steps, there are exploded diagrams at the start of each removal and disassembly section.

- 1. An easy-to-see exploded diagram ④ is provided for removal and disassembly jobs.
- 2. Numbers ⑤ are given in the order of the jobs in the exploded diagram. A number that is enclosed by a circle indicates a disassembly step.
- 3. An explanation of jobs and notes is presented in an easy-to-read way by the use of symbol marks ⑥. The meanings of the symbol marks are given on the next page.
- 4. A job instruction chart ⑦ accompanies the exploded diagram, providing the order of jobs, names of parts, notes in jobs, etc.
- 5. For jobs requiring more information, the step-by-step format supplements ⑧ are given in addition to the exploded diagram and the job instruction chart.

② CLUTCH      ① ENG

**CLUTCH CRANKCASE COVER (RIGHT)**

⑤ → [Diagram]

④ → [Diagram]

⑦ → [Table]

Order	Job name/Part name	Q'ty	Remarks
	<b>Crankcase cover (right) removal</b>		Remove the parts in the order below. Stand the motorcycle on a level surface. <b>WARNING</b> Securely support the motorcycle so there is no danger of it falling over. Refer to "ENGINE OIL REPLACEMENT" in CHAPTER 3.
	Engine oil		Refer to "ENGINE REMOVAL".
	Muffler assembly 1,2	1	
	Brake pedal link	1	
1	Oil filter cover plate	1	
2	Oil filter cover	1	L=70 mm × 1,65 mm × 1,25 mm × 3
3	O-ring	1	
4	Oil filter	1	
5	Crankcase cover (right)	1	L=65 mm × 1,55 mm × 1,45 mm × 4,30 mm × 4

4-34

③ CLUTCH      ① ENG

**CLUTCH REMOVAL**

1. Straighten:  
• Lock washer tab

2. Loosen:  
• Nut (clutch boss) ①

**NOTE:**  
Loosen the nut (clutch boss) ① while holding the clutch boss ② with the clutch holding tool ③.

**Clutch holding tool:**  
90890-04086

**PRIMARY DRIVE GEAR REMOVAL**

1. Straighten:  
• Lock washer tab

2. Loosen:  
• Nut (primary drive gear) ①

**NOTE:**  
Place a copper plate ② between the teeth of the primary drive gear ③ and primary driven gear to lock them.

**CLUTCH INSPECTION**

1. Inspect:  
• Friction plates  
Wear/damage → Replace the friction plates as a set.

2. Measure:  
• Friction plate thickness  
Out of specification → Replace the friction plates as a set.  
Measure at four places.


















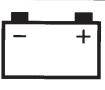





**Thickness (friction plate):**  
2.9 – 3.1 mm  
Wear limits: 2.6 mm

3. Inspect:  
• Clutch plate  
Damage → Replace the clutch plates as a set.

4. Measure:  
• Clutch plate warpage  
Out of specification → Replace the clutch plates as a set.  
Use a surface plate and a feeler gauge ①.

**Warp limit (clutch plate):**  
Less than 0.2 mm

4-38

① <b>GEN INFO</b> 	② <b>SPEC</b> 	
③ <b>INSP ADJ</b> 	④ <b>ENG</b> 	
⑤ <b>CARB</b> 	⑥ <b>CHAS</b> 	
⑦ <b>ELEC</b> 	⑧ <b>TRBL SHTG</b> 	
⑨ 	⑩ 	
⑪ 	⑫ 	
⑬ 	⑭ 	
⑮ 	⑯ 	
⑰ 	⑱ 	⑲ 
⑳ 	㉑ 	㉒ 
㉓ 	㉔ <b>New</b>	

EAS0009

## SYMBOLS

The following symbols are not relevant to every vehicle.

Symbols ① to ⑧ indicate the subject of each chapter.

- ① General information
- ② Specifications
- ③ Periodic checks and adjustments
- ④ Engine
- ⑤ Carburetor(-s)
- ⑥ Chassis
- ⑦ Electrical system
- ⑧ Troubleshooting

Symbols ⑨ to ⑯ indicate the following.

- ⑨ Serviceable with engine mounted
- ⑩ Filling fluid
- ⑪ Lubricant
- ⑫ Special tool
- ⑬ Tightening torque
- ⑭ Wear limit, clearance
- ⑮ Engine speed
- ⑯ Electrical data

Symbols ⑰ to ㉒ in the exploded diagrams indicate the types of lubricants and lubrication points.

- ⑰ Engine oil
- ⑱ Gear oil
- ⑲ Molybdenum disulfide oil
- ⑳ Wheel bearing grease
- ㉑ Lithium soap base grease
- ㉒ Molybdenum disulfide grease

Symbols ㉓ to ㉔ in the exploded diagrams indicate the following:

- ㉓ Apply locking agent (LOCTITE®)
- ㉔ Replace the part


---

## CONTENTS

<b>GENERAL INFORMATION</b> .....	1
MOTORCYCLE IDENTIFICATION .....	1
VEHICLE IDENTIFICATION NUMBER .....	1
MODEL LABEL .....	1
<b>SPECIFICATIONS</b> .....	2
GENERAL SPECIFICATIONS .....	2
MAINTENANCE SPECIFICATIONS .....	3
ENGINE .....	3
CHASSIS .....	4
ELECTRICAL .....	5
LUBRICATION POINTS AND LUBRICANT TYPES .....	7
ENGINE .....	7
CABLE ROUTING .....	8
<b>PERIODIC INSPECTIONS AND ADJUSTMENTS</b> .....	17
INTRODUCTION .....	17
PERIODIC MAINTENANCE/LUBRICATION INTERVALS .....	17
REAR BRAKE ADJUSTMENT .....	19
SHIFT PEDAL ADJUSTMENT .....	21
<b>CARBURATION</b> .....	22
AIR INDUCTION SYSTEM .....	22
AIR INDUCTION SYSTEM DIAGRAMS .....	22
CHECKING THE AIR INDUCTION SYSTEM .....	25
<b>CHASSIS</b> .....	26
FRONT BRAKE .....	26
FRONT BRAKE PADS .....	26
FRONT BRAKE CALIPER .....	29
<b>WIRING DIAGRAM</b>	





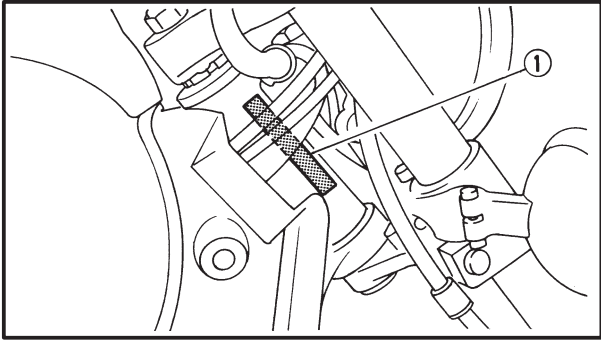


EB100000

## GENERAL INFORMATION MOTORCYCLE IDENTIFICATION

EB100010

### VEHICLE IDENTIFICATION NUMBER

The vehicle identification number ① is stamped into the right side of the steering head.

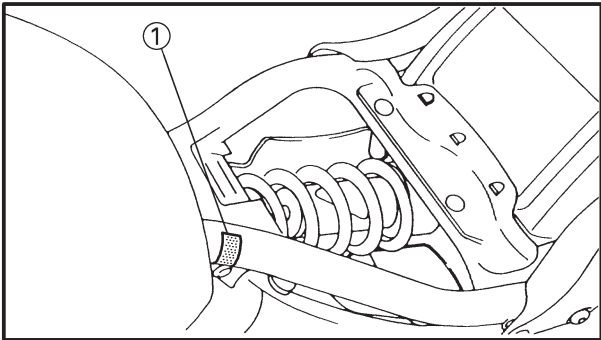

### MODEL LABEL

The model label ① is affixed to the frame. This information will be needed to order spare parts.



## SPECIFICATIONS

### GENERAL SPECIFICATIONS

Item	Standard
Model code:	XVS650A: 5BNV, 5BNW
Basic weight: With oil and a full fuel tank	247 kg
Bulb wattage × quantity:	
Headlight	12 V 60 W/55 W × 1
Tail/brake light	12 V 5 W/21 W × 1
Auxiliary light	12 V 4W × 1
Turn signal light	12 V 21 W × 4
Meter light	12 V 1.7 W × 1
Neutral indicator light	12 V 1.7 W × 1
High beam indicator light	12 V 1.7 W × 1
Turn indicator light	12 V 1.7 W × 1
Engine indicator light	12 V 1.7 W × 1



MAINTENANCE SPECIFICATIONS

ENGINE

Item	Standard	Limit
Connecting rod:		
Oil clearance	0.031 ~ 0.055 mm	...
Color code (corresponding size)	① Blue ② Black ③ Brown ④ Green	...
Carburetor:		
I.D. mark	5BN5 20 (5BNW) 5BN8 30 (5BNV)	...
Main jet (M.J)	#90	...
Main air jet (M.A.J)	#50	...
Jet needle (J.N)	4CT2-2	...
Needle jet (N.J)	O-4	...
Pilot air jet (P.A.J.1)	#100	...
Pilot outlet (P.O)	0.85	...
Pilot jet (P.J)	#20	...
Bypass 1 (B.P.1)	0.8	...
Bypass 2 (B.P.2)	0.8	...
Bypass 3 (B.P.3)	0.8	...
Pilot screw (P.S)	2-1/2	...
Valve seat size (V.S)	1.0	...
Starter jet (G.S.1)	#17.5	...
Starter jet (G.S.2)	0.9	...
Throttle valve size (Th.V)	#140	...
Fuel level (F.L)	7.5 ~ 8.5 mm	...
Engine idle speed	1,150 ~ 1,250 r/min	...
Intake vacuum	29.0 kPa (0.29 kg/cm <sup>2</sup> , 220 mmHg)	...
CO%	3 ~ 4%	...
Engine oil temperature	80 ~ 90°C	...

## MAINTENANCE SPECIFICATIONS

**SPEC**

### CHASSIS

Item	Standard	Limit
Brake lever & brake pedal:		
Brake lever free play (at pivot)	1 ~ 2 mm	...
Brake lever free play (at lever end)	10 ~ 15 mm	...
Brake pedal position	108 mm	...
Brake pedal free play	20 ~ 30 mm	...
Clutch lever free play (at pivot)	2 ~ 3 mm	...
Clutch lever free play (at lever end)	10 ~ 15 mm	...



**ELECTRICAL**

Item	Standard	Limit
T.C.I.:		
Pickup coil resistance/color	182 ~ 222 Ω at 20°C/Gray – Black	...
T.C.I. unit model/manufacturer	J4T094/MITSUBISHI	...
Ignition coil:		
Model/manufacturer	F6T541/MITSUBISHI	...
Minimum spark gap	6 mm	...
Primary winding resistance	3.6 ~ 4.8 Ω at 20°C	...
Secondary winding resistance	10.7 ~ 14.5 kΩ at 20°C	...
Voltage regulator:		
Type	Semi-conductor, short-circuit type	...
Model/manufacturer	SH650C-11/SHINDENGEN	...
No load regulated voltage	14.1 ~ 14.9 V	...
Rectifier:		
Model/manufacturer	SH650C-11/SHINDENGEN	...
Capacity	18 A	...
Withstand voltage	200 V	...
Electric starter system:		
Type	Constant mesh type	...
Starter motor:		
Model/manufacturer	SM-13/MITSUBA	...
I.D. number	SM-13	...
Output	0.7 kW	...
Brush overall length	10 mm	4 mm
Commutator diameter	28 mm	27 mm
Mica undercut	0.7 mm	...
Starter relay:		
Model/manufacturer	MS-5F-441/JIDECO	...
Amperage rating	180 A	...
Flasher relay:		
Type	Full transistor type	...
Model/manufacturer	FE246BH/DENSO	...
Self cancelling device	No	...
Flasher frequency	75 ~ 95 cycle/min	...
Wattage	21 W × 2 + 3.4 W	...
Fuel pump relay:		
Model/manufacturer	G8R-30Y-Q/OMRON	...

# MAINTENANCE SPECIFICATIONS



Item	Standard	Limit
Circuit breaker:		
Type	Fuse	...
Amperage for individual circuit		
MAIN	30 A × 1	...
HEADLIGHT	15 A × 1	...
SIGNALS	10 A × 1	...
IGNITION	10 A × 1	...
CARBURETOR HEATER	15 A × 1	...
Reserve	30 A × 1	...
Reserve	15 A × 1	...
Reserve	10 A × 1	...

## LUBRICATION POINTS AND LUBRICANT TYPES

**SPEC**



EB203000

### LUBRICATION POINTS AND LUBRICANT TYPES ENGINE

Lubrication point	Symbol
Crankshaft journal	
Camshaft cam lobe	
Primary driven gear	






# CABLE ROUTING

**SPEC**



- A** Inside the motorcycle.
  - B** Place the end of the plastic locking tie as shown.
  - C** Fasten the rear brake switch lead, sidestand switch lead and rectifier/regulator lead with metal clamp or plastic locking tie.
  - D** Pass the front flasher light leads (left and right) and headlight lead through the headlight cover hole.
  - E** Pass the left handlebar switch lead behind the upper bracket.
  - F** Fasten the left handlebar switch lead with a plastic locking tie.
  - G** Pass the speedometer cable, speedometer light leads and fuel tank breather hose through the fuel tank hole.
  - H** To the speedometer light leads.
  - I** Rectifier/regulator lead should not be out over the bracket.
  - J** Pass the right handlebar switch lead and headlight lead over the other harness and leads.
  - K** Pass the clutch cable through the cable guide.
  - L** Fasten the sidestand switch lead and rectifier/regulator lead with a plastic locking tie.
  - M** Install the plastic locking tie so that it is up against the frame projection.
  - N** To the engine.
  - O** Pass the sidestand switch and the lead wire through the sidestand bracket.
- When installing, wake sure not to have any extra loosening.

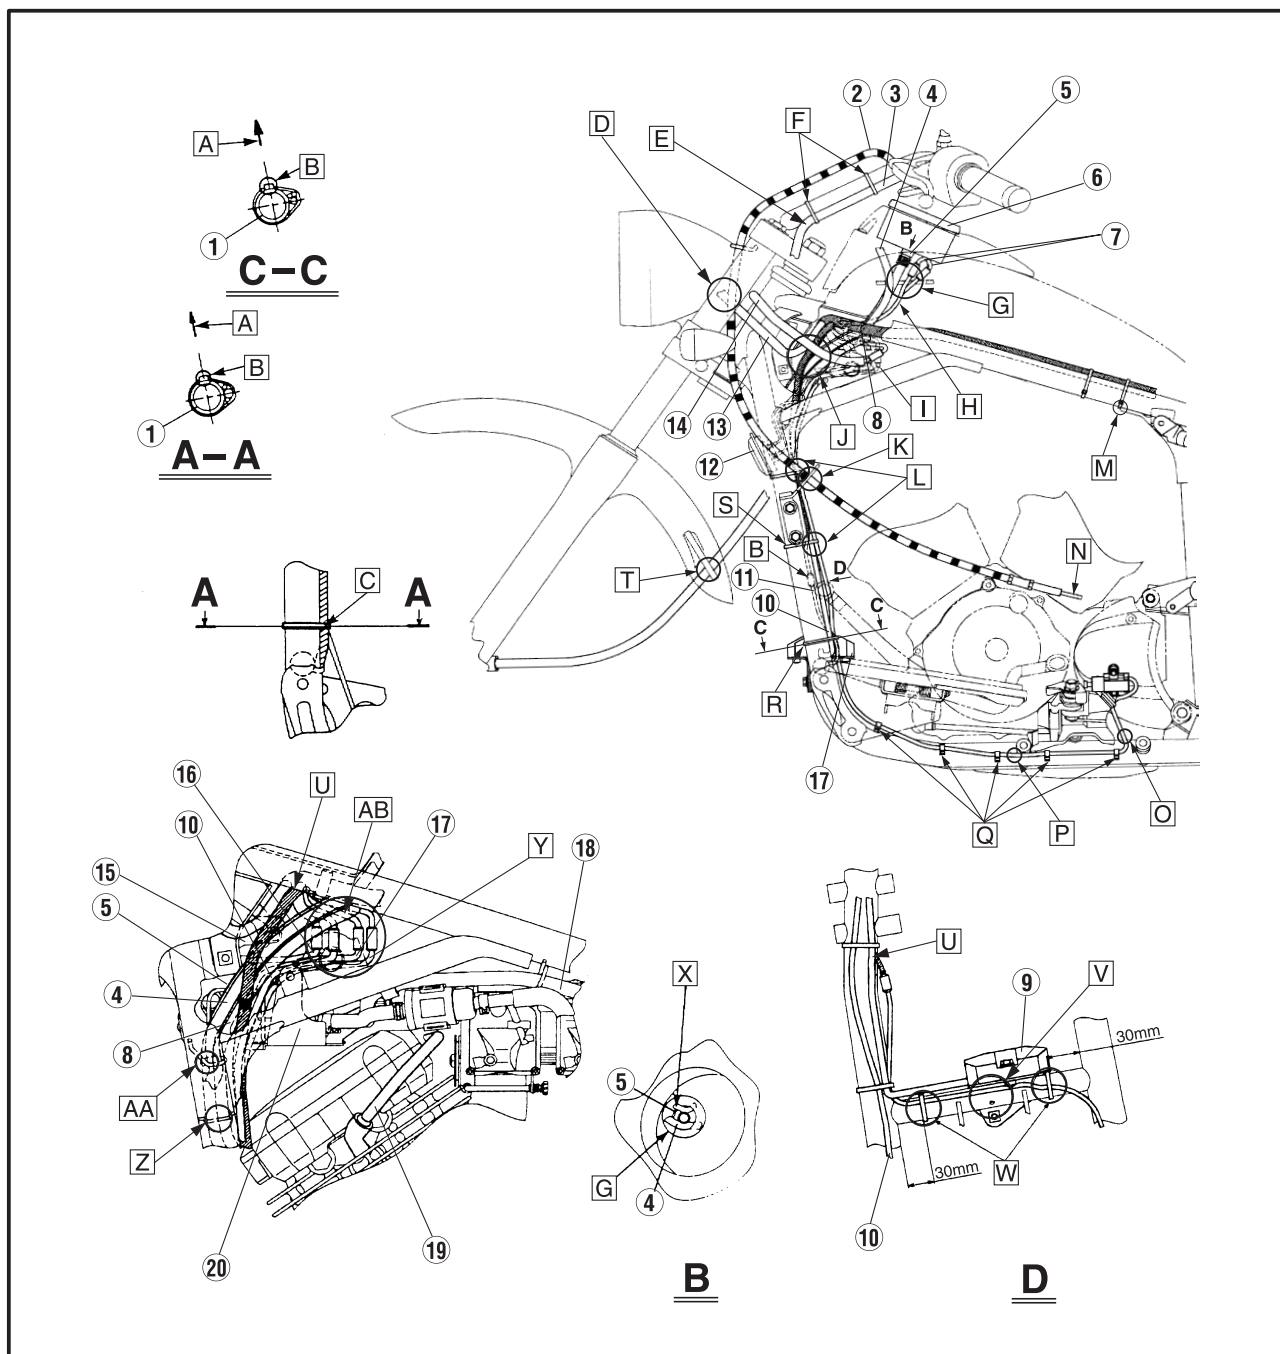


# CABLE ROUTING

**SPEC**



- P** Route the sidestand switch and the lead wire under the frame boss.
- Q** Fasten the sidestand switch lead with a metal clamp.
- R** Connect the rear brake switch coupler in front of the roll over valve stay.
- S** Install the plastic locking tie immediately below the cable guide bracket.
- T** Pass the speedometer cable through the speedometer cable holder.
- U** To the rectifier/regulator.
- V** Pass the rear brake switch lead between the frame and rectifier/regulator. Do not pinch the rear brake switch lead.
- W** Fasten the rear brake switch lead with a plastic locking tie.
- X** To the speedometer light leads.
- Y** Place the rectifier/regulator coupler completely inside the motorcycle body.
- Z** Pass the fuel tank breather hose and vacuum chamber air vent hose through the holder.
- AA** Pass the speedometer cable through the holder.
- AB** Place the couplers behind the steering head.

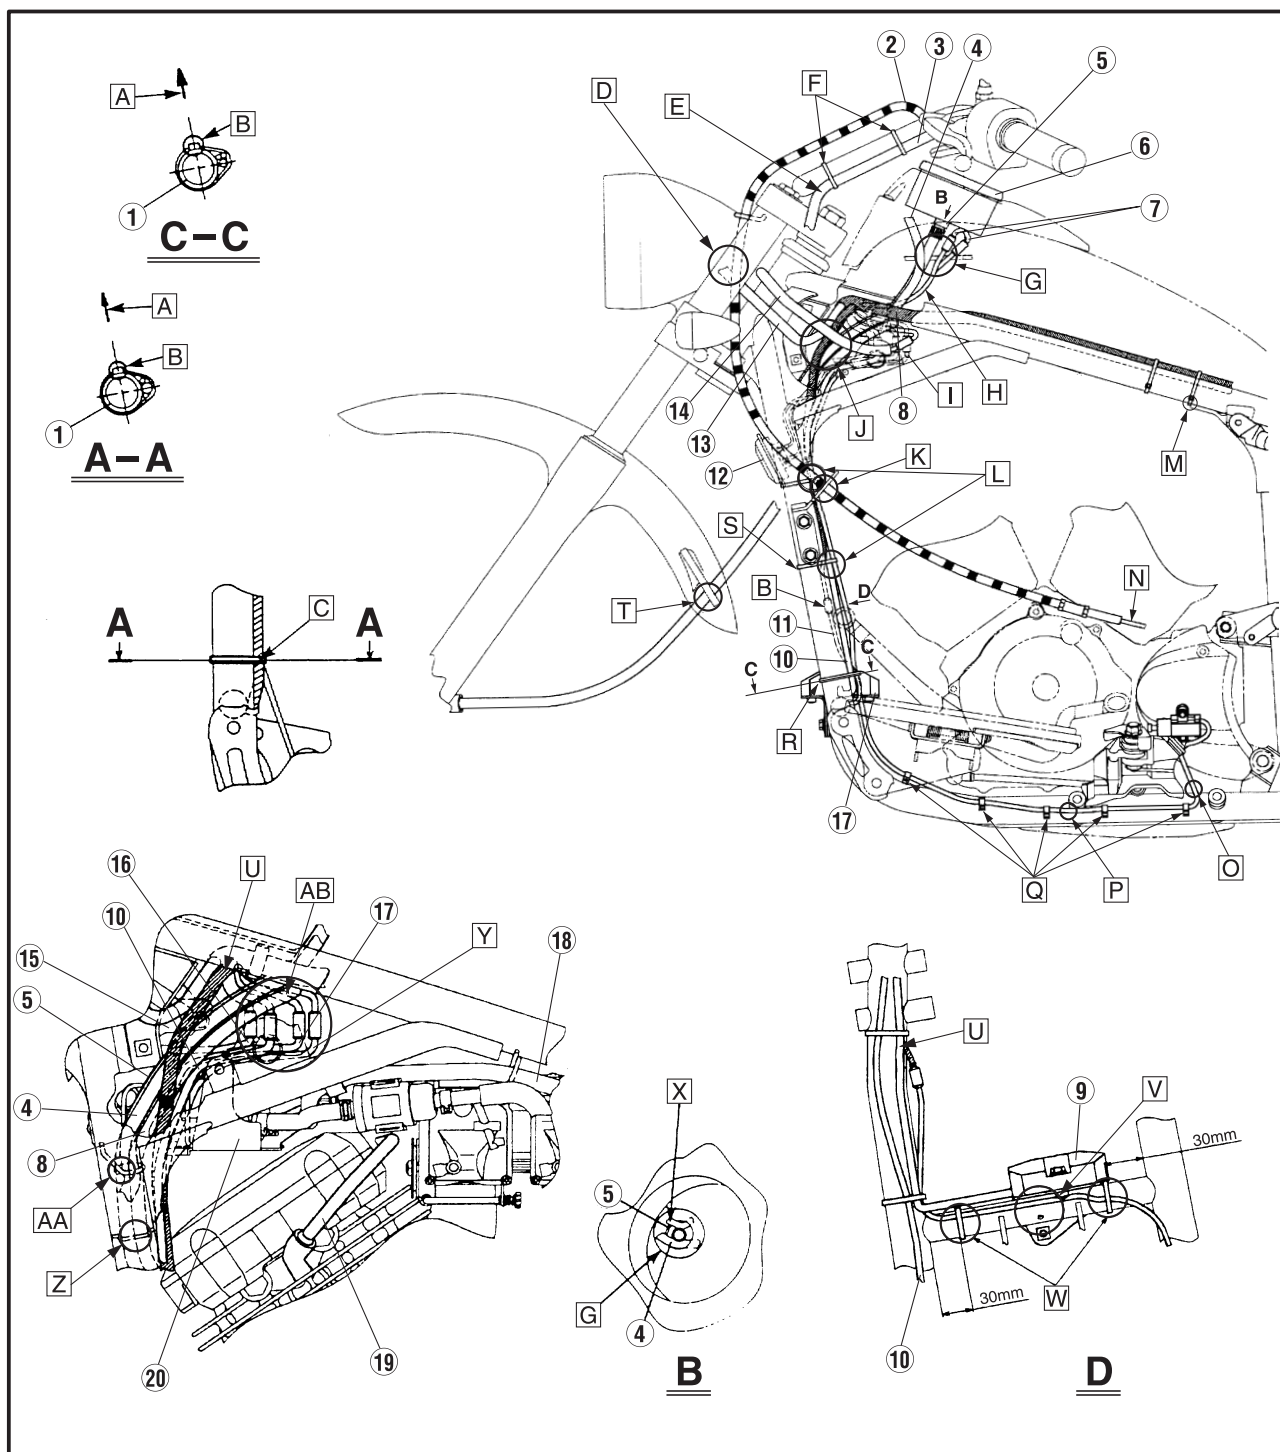

# CABLE ROUTING

**SPEC**




- ① Frame bracket
- ② Dimmer switch
- ③ Self-canceling turn signal relay
- ④ Fuse box
- ⑤ Battery positive (+) lead
- ⑥ Spark plug lead
- ⑦ Vacuum chamber air bent hose
- ⑧ Starter cable
- ⑨ Right handlebar switch lead
- ⑩ Brake hose
- ⑪ Throttle cables
- ⑫ Thermo switch lead
- ⑬ Flasher light relay
- ⑭ Starter relay
- ⑮ Carburetor heater relay
- ⑯ Neutral switch lead
- ⑰ Pickup coil lead
- ⑱ A.C. magneto lead
- ⑲ Battery negative (-) lead
- ⑳ Starter motor lead
- ㉑ Battery cover
- ㉒ Battery
- ㉓ Wire harness
- ㉔ Starting circuit cut-off relay

- ㉕ Fuel tank breather hose
- ㉖ Speedometer cable
- ㉗ Ignitor unit

**A** Pass the tail/brake light lead between the frame bracket and battery box. Position the mud guard the between the edge of the frame bracket and the tail/brake light lead.

**B** Fasten the dimmer switch lead with a clamp.

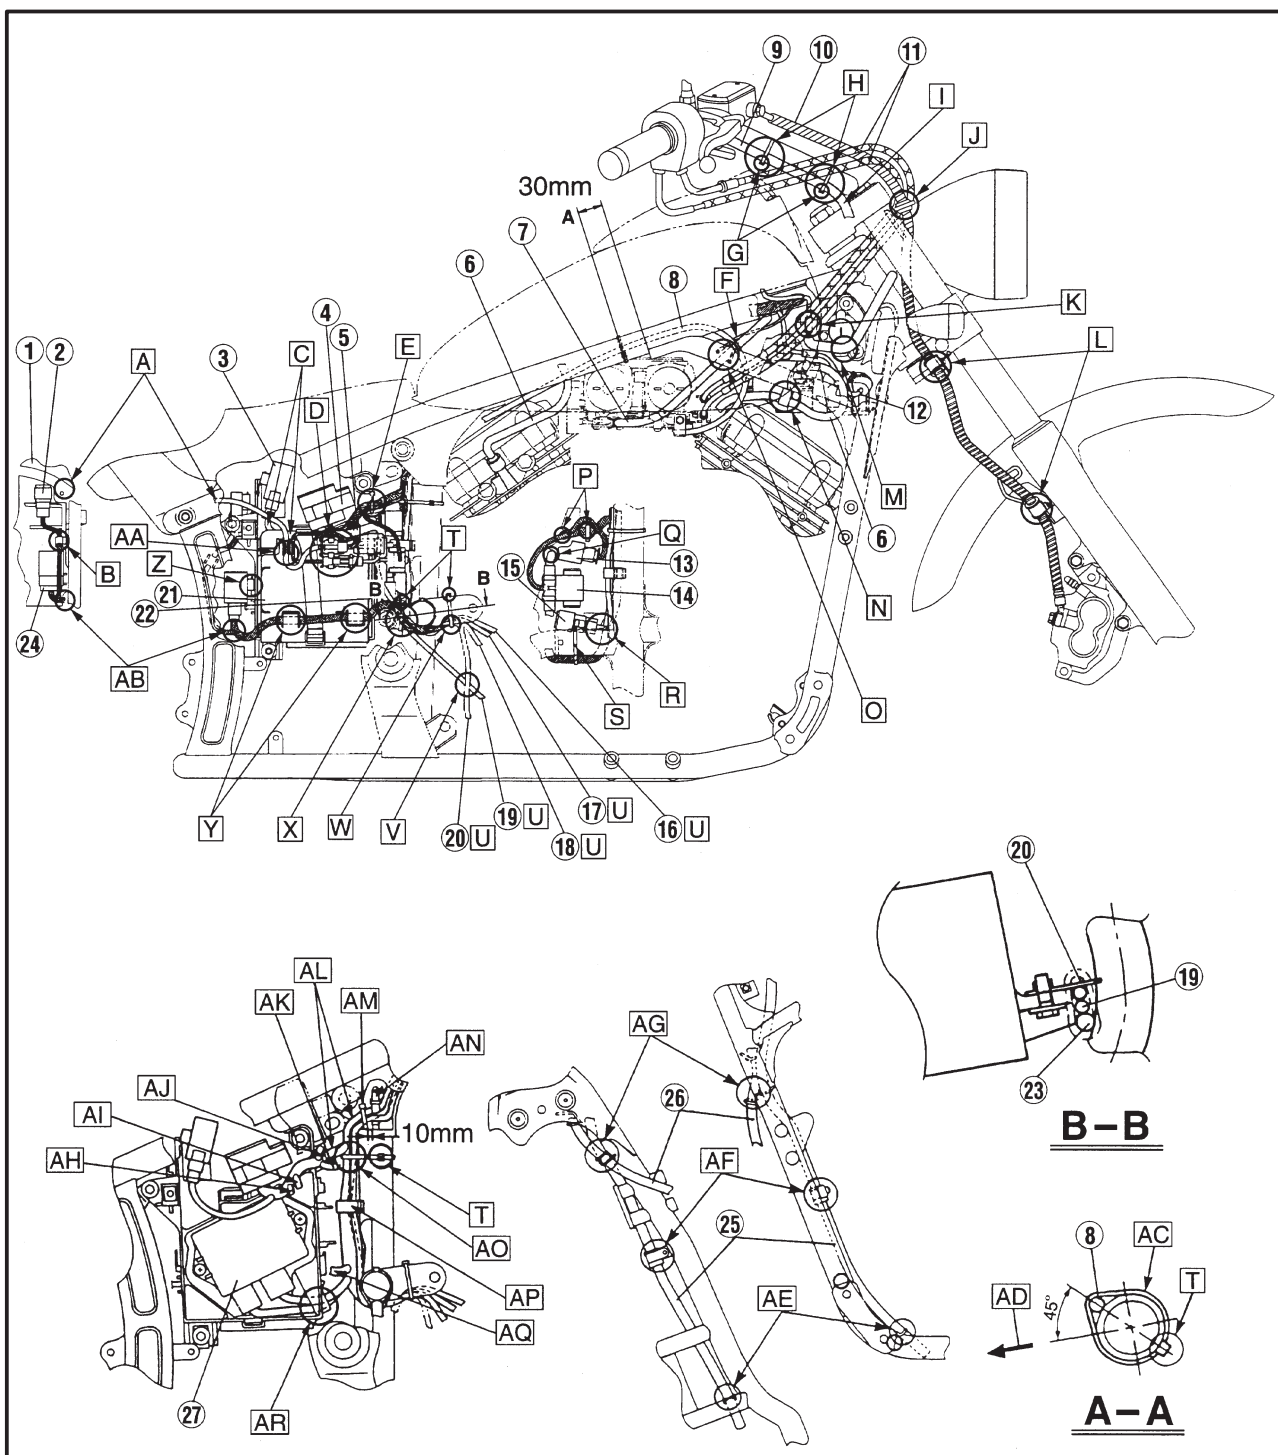


# CABLE ROUTING

**SPEC**



- C** Fasten the self-canceling turn signal relay lead and battery positive (+) lead with a battery band.
- D** Fasten the tail/brake light lead coupler and battery negative (-) lead coupler with a clamp.
- E** Fasten the starter relay lead and fuse box lead with a plastic locking tie.
- F** To the ignition coil.
- G** The end of the plastic locking tie should face towards the under the handlebar.
- H** Fasten the right handlebar switch lead with a plastic locking tie.
- I** Pass the right handlebar switch lead behind the upper bracket.
- J** Fasten the brake hose grommet with a brake hose holder.
- K** Place the left handlebar switch coupler on the side of the main switch.
- L** Fasten the brake hose with a brake hose holder.
- M** Pass the left handlebar switch lead under the main switch.
- N** Fasten the spark plug lead with a metal clamp.
- O** Pass the ignition coil lead inside of the starter cable.
- P** Fasten the fuse box lead with a plastic locking tie.

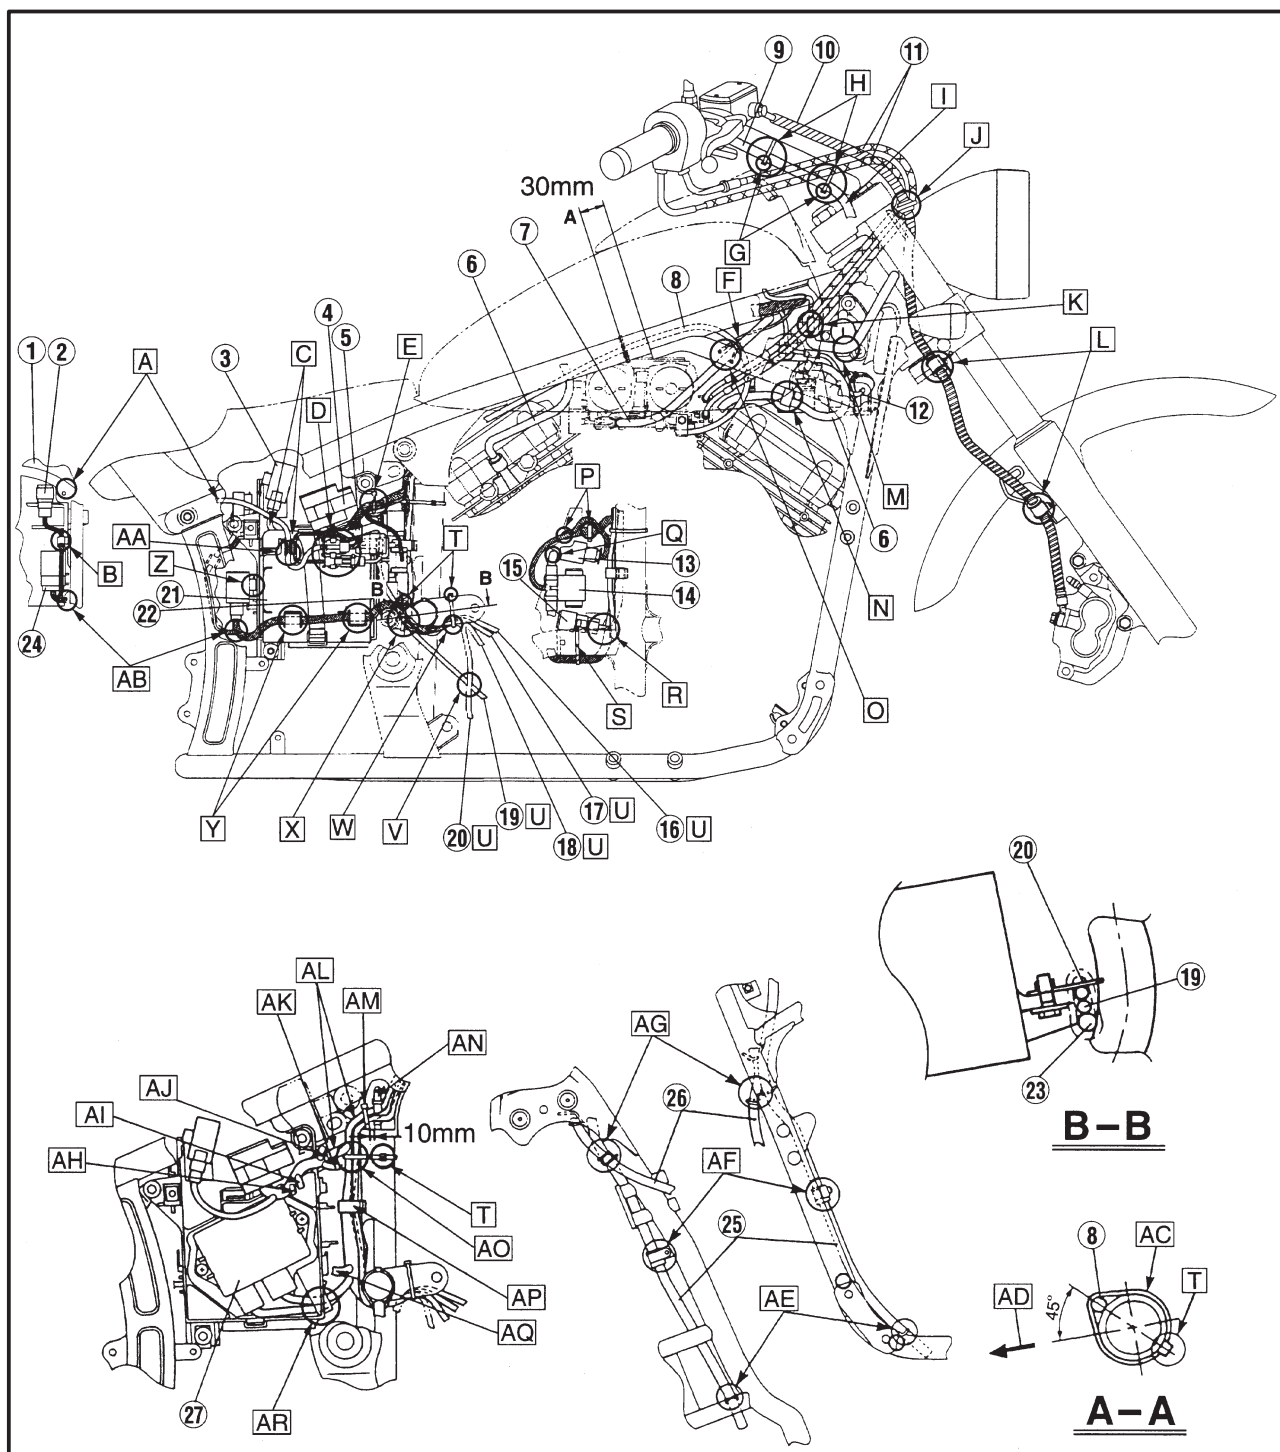




# CABLE ROUTING

**SPEC**



- Q** Fasten the battery positive (+) lead with a battery box clamp.
- R** The carburetor heater relay should not touch the wire harness.
- S** Fasten the wire harness with a plastic locking tie.
- T** Place the end of the plastic locking tie as shown.
- U** From the engine.
- V** Pass the starter motor lead over the battery negative (-) lead.
- W** Fasten the pickup coil lead, A.C. magneto lead, neutral switch lead and starter motor lead with a plastic locking tie.
- X** Fasten the battery negative (-) lead, starter motor lead and wire harness with a plastic locking tie.
- Y** Fasten the wire harness with a clamp.
- Z** The starting safety relay must be fixed to the battery box after connecting the wire harness.
- AA** Fasten the battery negative (-) lead and tail/brake light lead with a clamp.
- AB** Pass the wire harness between the frame and battery box.
- AC** Fasten the starter cable with a plastic locking tie.
- AD** Inside the motorcycle.

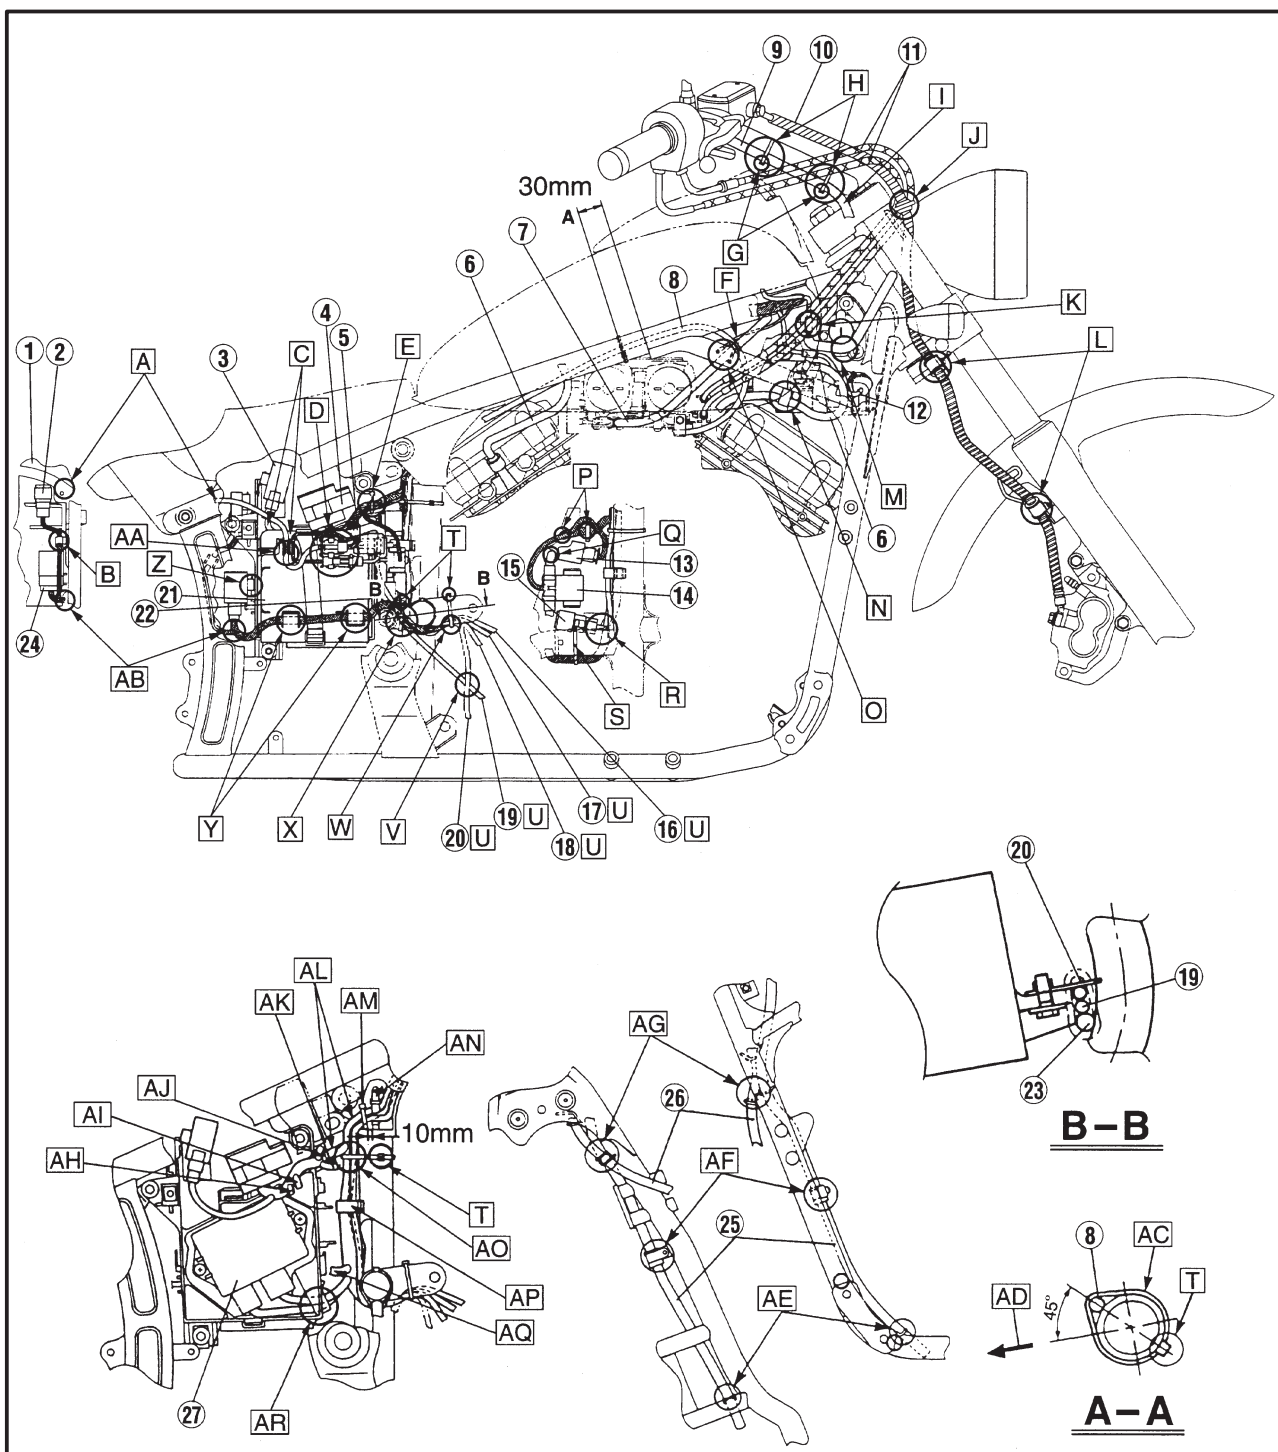


# CABLE ROUTING

**SPEC**



- AE** Pass the fuel tank breather hose through the holder.
- AF** Fasten the fuel tank breather hose with a metal clamp.
- AG** Pass the speedometer cable through the front side guide.
- AH** To the battery negative (-) lead.
- AI** To the rear fender.
- AJ** To the flasher light relay.
- AK** To the starter relay.
- AL** The wire harness and leads should not touch the rear shock absorber.
- AM** Fasten the wire harness and leads with a plastic locking tie.
- AN** Pass the plastic band through the frame hole. Fasten the wire harness with a plastic band at the point where the tape is located.
- AO** Fasten the wire harness and leads with a plastic locking tie.
- AP** Fasten the wire harness and leads with a metal clamp.
- AQ** To the carburetor heater relay.
- AR** Pass the ignitor unit leads through the battery box hole.

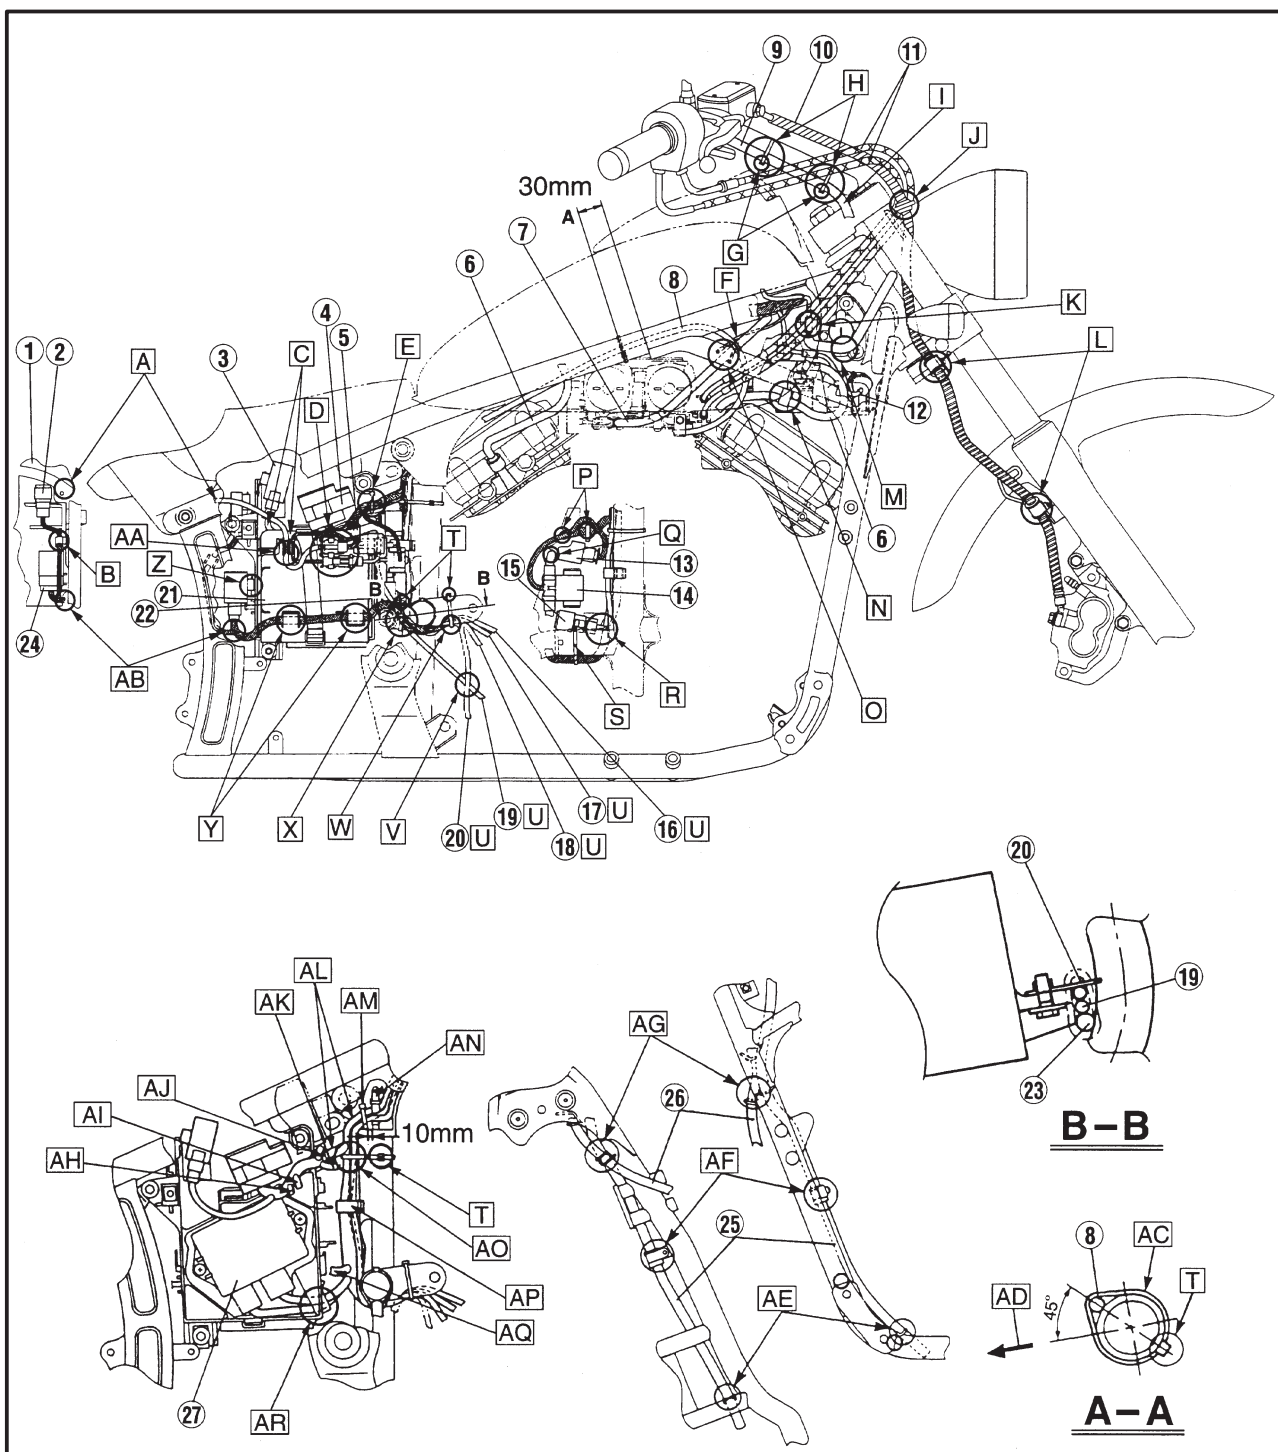

# CABLE ROUTING


**SPEC**



- ① Front flasher light (right)
- ② Throttle cables
- ③ Brake hose
- ④ Right handlebar switch lead
- ⑤ Clutch cable
- ⑥ Left handlebar switch lead
- ⑦ Front flasher light (left)
- ⑧ Ignition coil
- ⑨ Spark plug lead
- ⑩ Silencer
- ⑪ Starter cable
- ⑫ Speedometer cable

- ⑬ Neutral switch lead
- ⑭ Pickup coil lead
- ⑮ A.C. magneto lead
- ⑯ Thermo switch lead
- ⑰ Fuel tank breather hose
- ⑱ Rectifier/regulator coupler
- ⑲ Wire harness
- ⑳ Throttle position sensor (TPS) lead
- ㉑ Frame
- ㉒ Air filter case

- A** Pass the throttle cables through the cable guide.
- B** Pass the left handlebar switch lead over the right handlebar switch lead.
- C** Pass the clutch cable through the cable guide.
- D** Fasten the handlebar switch leads with a plastic band.
- E** To the ignition coil.
- F** Pass the starter cable between the ignition coil and spark plug lead.

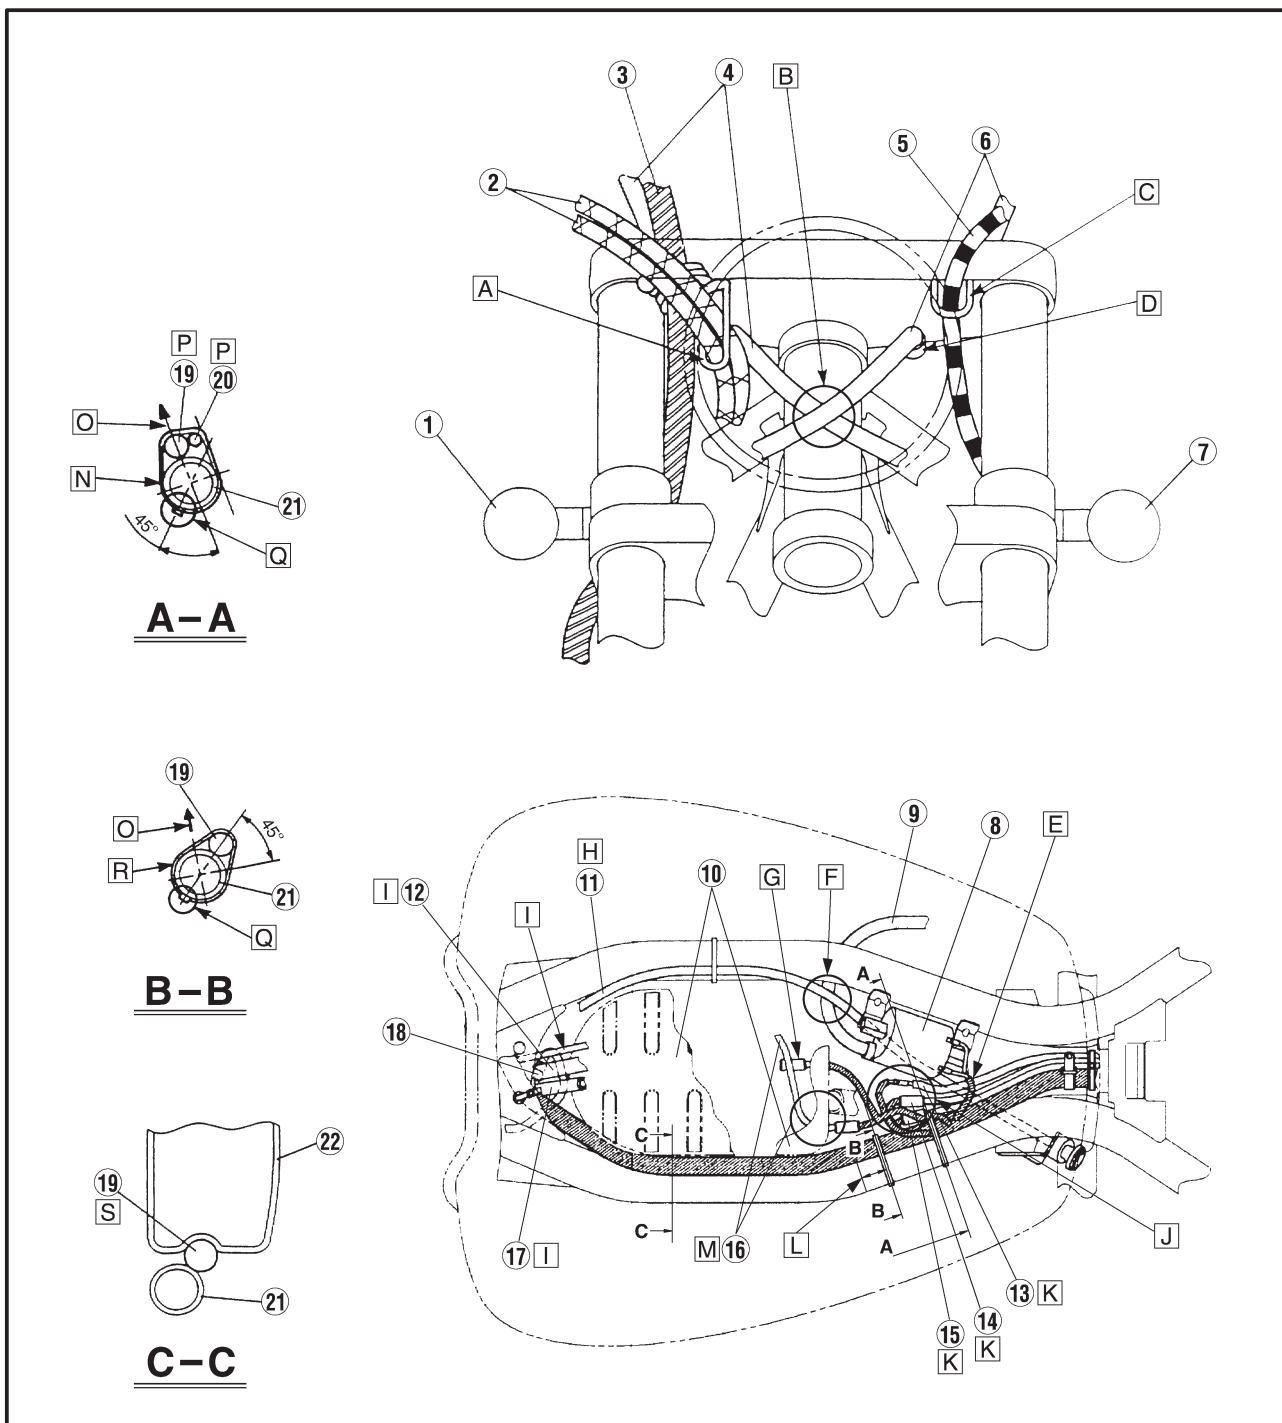


# CABLE ROUTING

**SPEC**



- G** To the throttle position sensor (TPS).
- H** To the carburetor.
- I** To the fuel tank.
- J** Pass the neutral switch lead, pickup coil lead and A.C. magneto lead under the ignition coil lead, thermo switch lead and throttle position sensor (TPS) lead.
- K** From the engine.
- L** 20 mm
- M** Pass the thermo switch lead inside of the silencer breather hose.
- N** Fasten the wire harness and throttle position sensor (TPS) lead with a plastic locking tie.
- O** Inside the motorcycle.
- P** Route the wire harness and throttle position sensor (TPS) lead so they run along the bottom of the frame tube.
- Q** Place the end of the plastic locking tie as shown.
- R** Fasten the wire harness with a plastic locking tie.
- S** Pass the wire harness between the air filter case groove and frame.

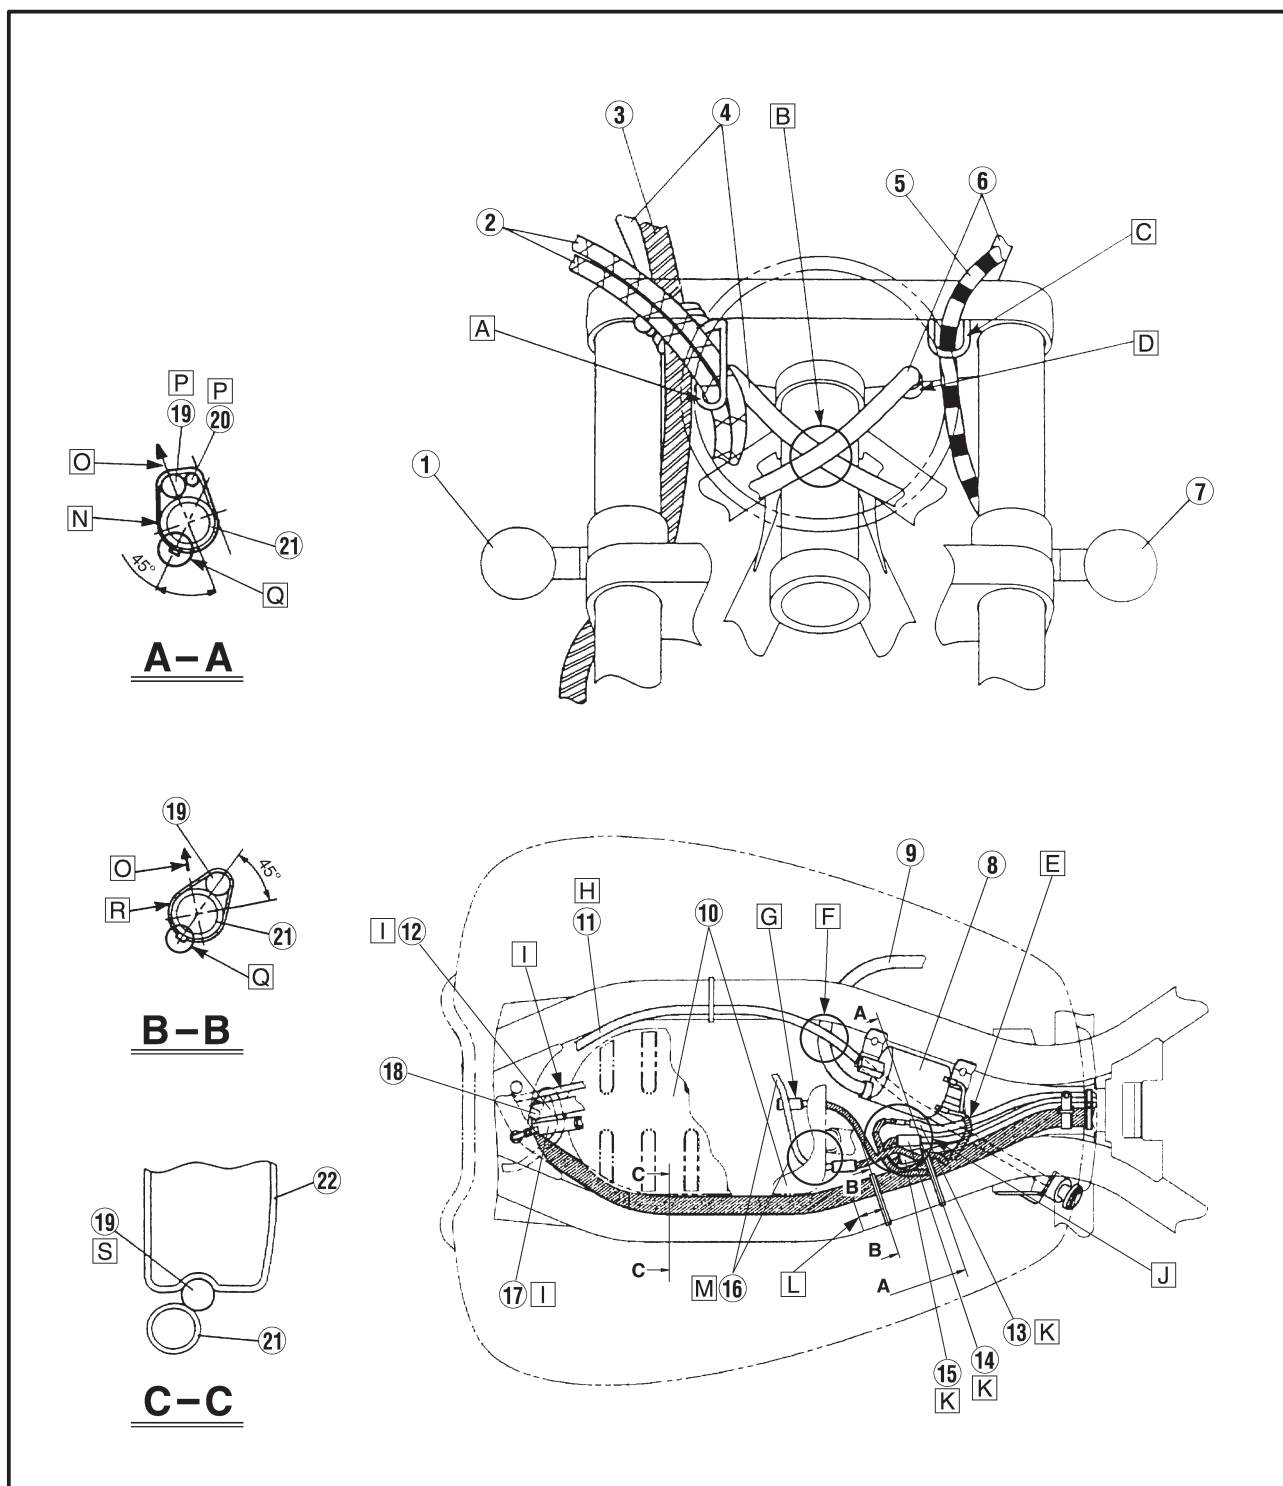



# INTRODUCTION/PERIODIC MAINTENANCE/ LUBRIATION INTERVALS



EB300000

## PERIODIC INSPECTIONS AND ADJUSTMENTS

### INTRODUCTION

This chapter includes all information necessary to perform recommended inspections and adjustments. These preventive maintenance procedures, if followed, will ensure more reliable vehicle operation and longer service life. The need for costly overhaul work will be greatly reduced. This information applies to vehicles already in service as well as to new vehicles that are being prepared for sale. All service technicians should be familiar with this entire chapter.

### NOTE:

- The annual checks must be performed every year, except if a kilometer-based maintenance is performed instead.
- From 50,000 km, repeat the maintenance intervals starting from 10,000 km.
- Items marked with an asterisk should be performed by a Yamaha dealer as they require special tools, data and technical skills.

EB301000

### PERIODIC MAINTENANCE/LUBRICATION INTERVALS

No.	ITEM	CHECKS OR MAINTENANCE JOB	ODOMETER READING (× 1,000 km)					ANNUAL CHECK
			1	10	20	30	40	
1	* Fuel line	● Check fuel hoses for cracks or damage.		√	√	√	√	√
2	Spark plugs	● Check condition. ● Clean and regap.		√		√		
		● Replace.			√		√	
3	* Valves	● Check valve clearance. ● Adjust.		√	√	√	√	
4	Air filter element	● Clean.		√		√		
		● Replace.			√		√	
5	Clutch	● Check operation. ● Adjust.	√	√	√	√	√	
6	* Front brake	● Check operation, fluid level and vehicle for fluid leakage.	√	√	√	√	√	√
		● Replace brake pads.	Whenever worn to the limit					
7	* Rear brake	● Check operation and adjust brake pedal freeplay.	√	√	√	√	√	√
		● Replace brake shoes.	Whenever worn to the limit					
8	* Brake hose	● Check for cracks or damage.		√	√	√	√	√
		● Replace.	Every 4 years					
9	* Wheels	● Check runout, spoke tightness and for damage. ● Tighten spokes if necessary.		√	√	√	√	
10	* Tires	● Check tread depth and for damage. ● Replace if necessary. ● Check air pressure. ● Correct if necessary.		√	√	√	√	
11	* Wheel bearings	● Check bearing for looseness or damage.		√	√	√	√	
12	* Swingarm	● Check operation and for excessive play.		√	√	√	√	
		● Lubricate with molybdenum disulfide grease.	Every 50,000 km					
13	* Steering bearings	● Check bearing play and steering for roughness.	√	√	√	√	√	
		● Lubricate with lithium-soap-based grease.	Every 20,000 km					
14	* Chassis fasteners	● Make sure that all nuts, bolts and screws are properly tightened.		√	√	√	√	√
15	Sidestand	● Check operation. ● Lubricate.		√	√	√	√	√
16	* Sidestand switch	● Check operation.	√	√	√	√	√	√
17	* Front fork	● Check operation and for oil leakage.		√	√	√	√	
18	* Rear shock absorber assembly	● Check operation and shock absorber for oil leakage.		√	√	√	√	
19	* Carburetors	● Check starter (choke) operation. ● Adjust engine idling speed and synchronization.	√	√	√	√	√	√
20	Engine oil	● Change.	√	√	√	√	√	√

## PERIODIC MAINTENANCE/LUBRICATION INTERVALS







NO.	ITEM	CHECKS OR MAINTENANCE JOB	ODOMETER READING (x 1,000 km)					ANNUAL CHECK
			1	10	20	30	40	
21	Engine oil filter element	<ul style="list-style-type: none"> <li>• Replace.</li> </ul>	√		√		√	
22	Final gear oil	<ul style="list-style-type: none"> <li>• Check oil level and vehicle for oil leakage.</li> </ul>	√	√		√		
		<ul style="list-style-type: none"> <li>• Change.</li> </ul>	√		√		√	
23	* Lights, signals and switches	<ul style="list-style-type: none"> <li>• Check operation.</li> <li>• Adjust headlight beam.</li> </ul>	√	√	√	√	√	√

**NOTE:**

- The air filter needs more frequent service if you are riding in unusually wet or dusty areas.
- Hydraulic brake service
  - Regularly check and, if necessary, correct the brake fluid level.
  - Every two years replace the internal components of the brake master cylinder and caliper, and change the brake fluid.
  - Replace the brake hoses every four years and if cracked or damaged.

# REAR BRAKE ADJUSTMENT

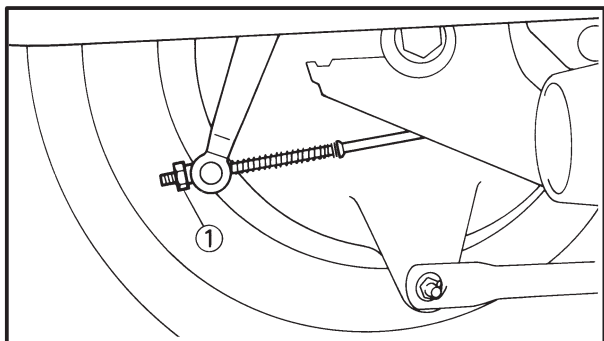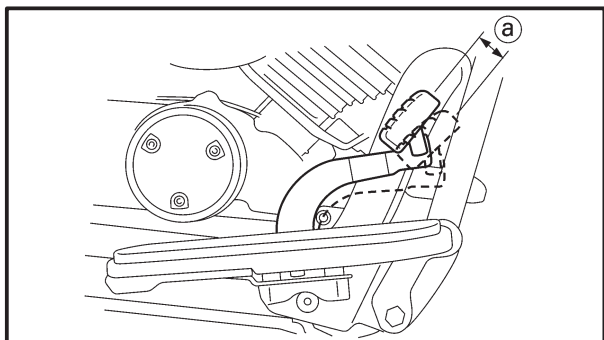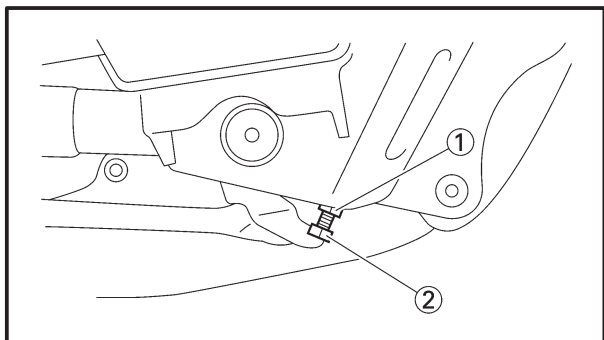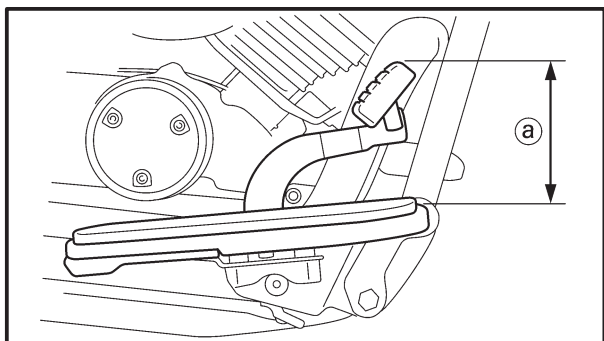

EB304012

## REAR BRAKE ADJUSTMENT

1. Check:
  - Brake pedal height (a)
  - Out of specification → Adjust.

	<b>Brake pedal height:</b> 108 mm (above the top of the footrest)
--	---

2. Adjust:
  - Brake pedal height

\*\*\*\*\*

### Adjustment steps:

- Loosen the locknut (1).
- Turn the adjuster (2) in or out until the specified pedal height is obtained.

Turning in:	brake pedal height is decreased.
Turning out:	brake pedal height is increased.

- Tighten the locknut.

	<b>Locknut:</b> 7 Nm (0.7 m•kg)
--	------------------------------------

\*\*\*\*\*

3. Check:
  - Brake pedal free play (a)
  - Out of specification → Adjust.

	<b>Free play (brake pedal):</b> 20 ~ 30 mm
--	---

4. Adjust:
  - Brake pedal free play

\*\*\*\*\*

### Adjustment steps:

Turn the adjuster (1) in or out until the specified free play is obtained.

Turning in:	brake pedal free play is decreased.
Turning out:	brake pedal free play is increased.

### CAUTION:

Make sure that there is no brake drag after adjusting the brake pedal height and the free play.

\*\*\*\*\*



## REAR BRAKE ADJUSTMENT

---



5. Adjust:
  - Brake light switch  
Refer to "BRAKE LIGHT SWITCH ADJUSTMENT".

# SHIFT PEDAL ADJUSTMENT

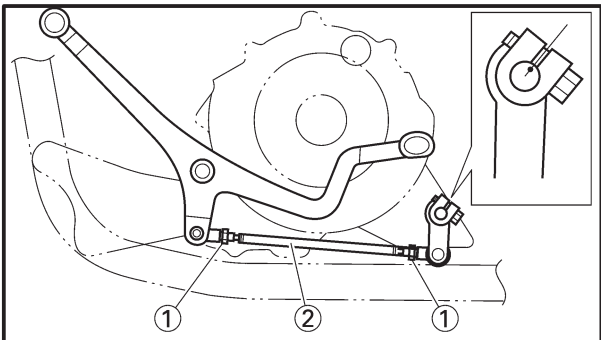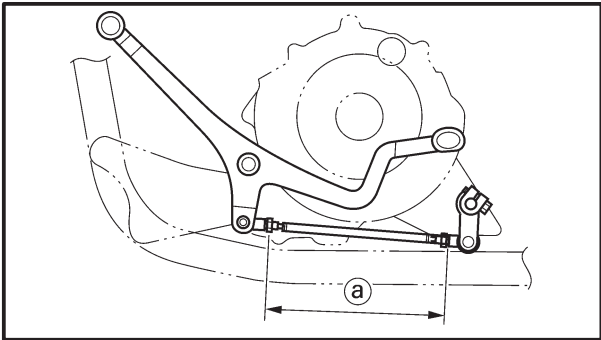

EB304080

## SHIFT PEDAL ADJUSTMENT

### 1. Check:

- Shift pedal position  
Check the shift pedal rod length (a).  
If the position is incorrect → Adjust.

	<b>Shift pedal rod length: 168 mm</b>
--	---

### 2. Adjust:

- Shift pedal position

\*\*\*\*\*

### Adjustment steps:

- Loosen both locknuts (1).
- To obtain the correct pedal position turn the shift pedal rod (2) in or out.

<b>Turning in:</b>	<b>shift pedal is lowered.</b>
<b>Turning out:</b>	<b>shift pedal is raised.</b>

- Tighten both locknuts.

\*\*\*\*\*

### NOTE:

- Align the mark on the shift shaft with the center of the slit.
- Turn in the both side of the shift pedal rod more than 4 times.



EB601000


# CARBURATION


## AIR INDUCTION SYSTEM

EAS00509

### AIR INDUCTION SYSTEM DIAGRAMS

- |                    |                              |
|--------------------|------------------------------|
| ① Reed valve       | Ⓐ To the front cylinder head |
| ② Air cut valve    | Ⓑ To the rear cylinder head  |
| ③ Air cleaner      |                              |
| ④ Carburetor joint |                              |

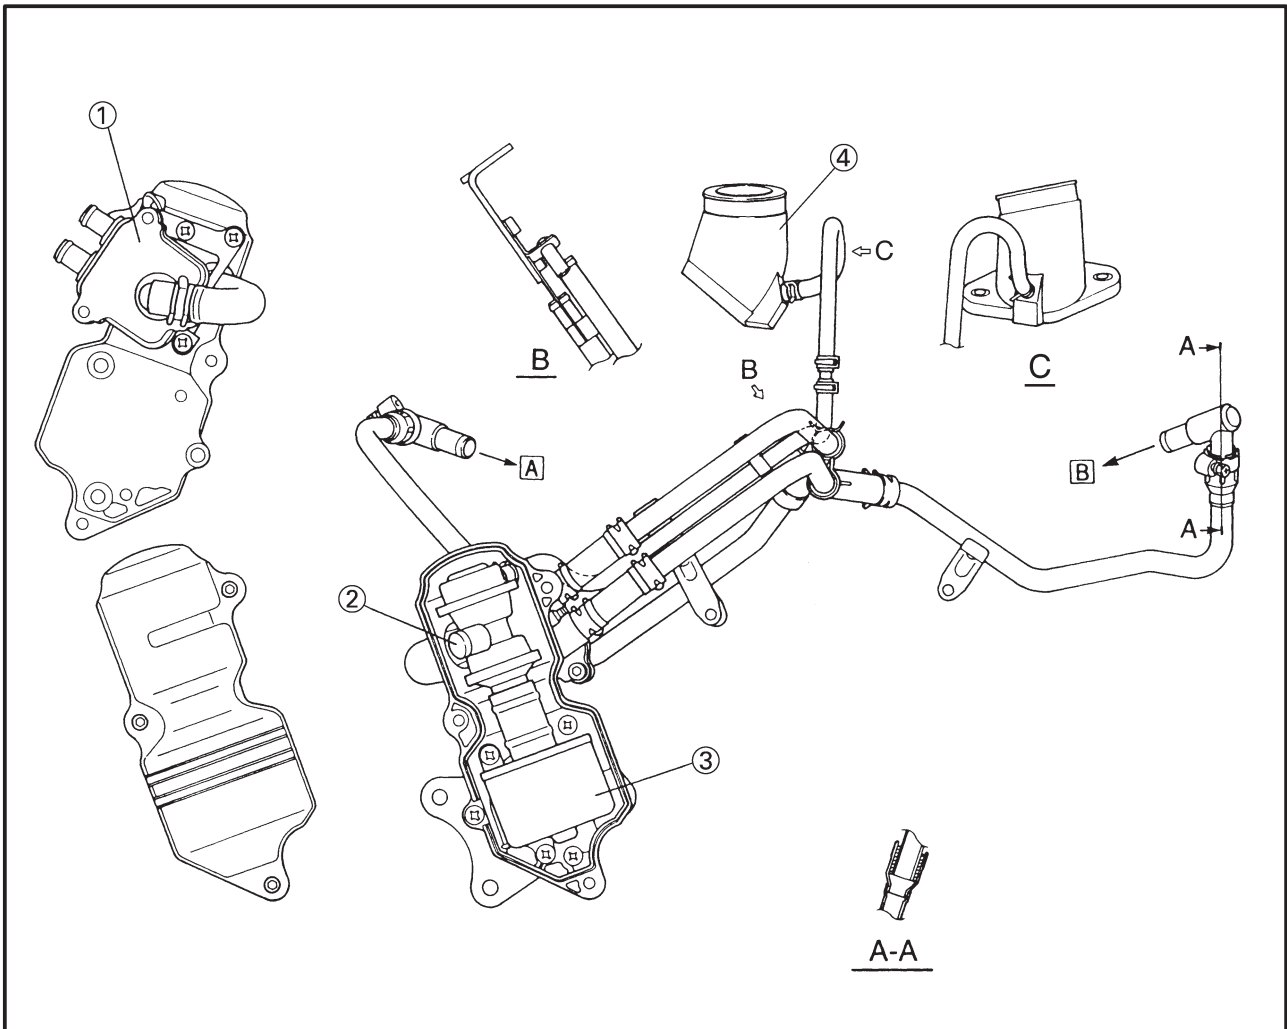


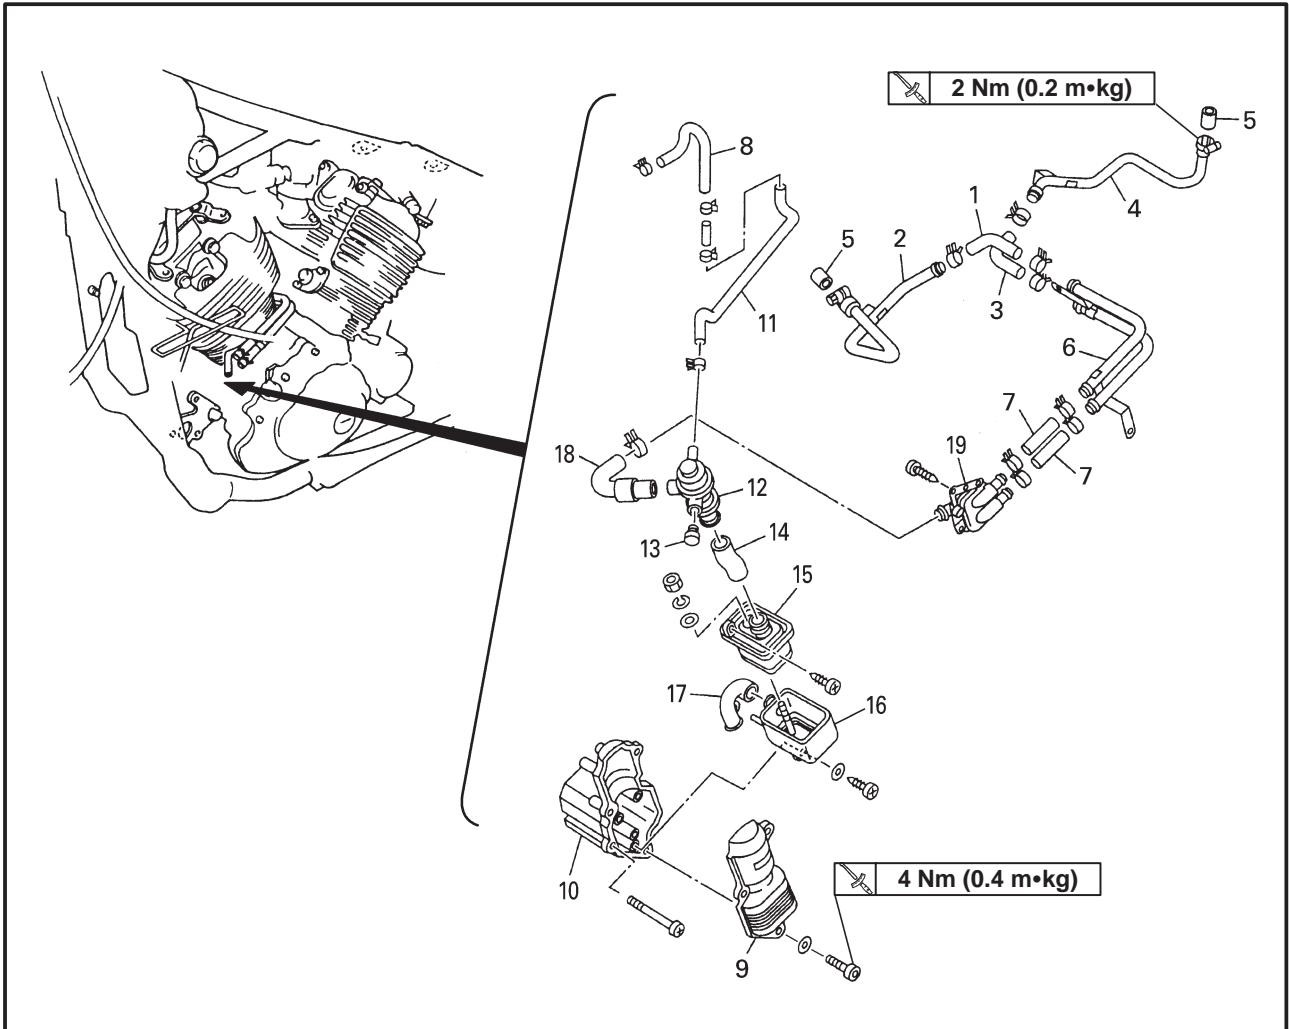

Order	Job/Part	Q'ty	Remarks
	<b>Removing the air induction system</b>		Remove the parts in the order listed.
1	Reed valve case to front cylinder head hose	1	
2	Reed valve case to front cylinder head pipe	1	
3	Reed valve case to rear cylinder head hose	1	
4	Reed valve case to rear cylinder head hose	1	
5	Gasket	2	
6	Reed valve case to cylinder head pipe	1	
7	Reed valve case to cylinder head hose	2	
8	Vacuum hose 2	1	

# AIR INDUCTION SYSTEM

CARB

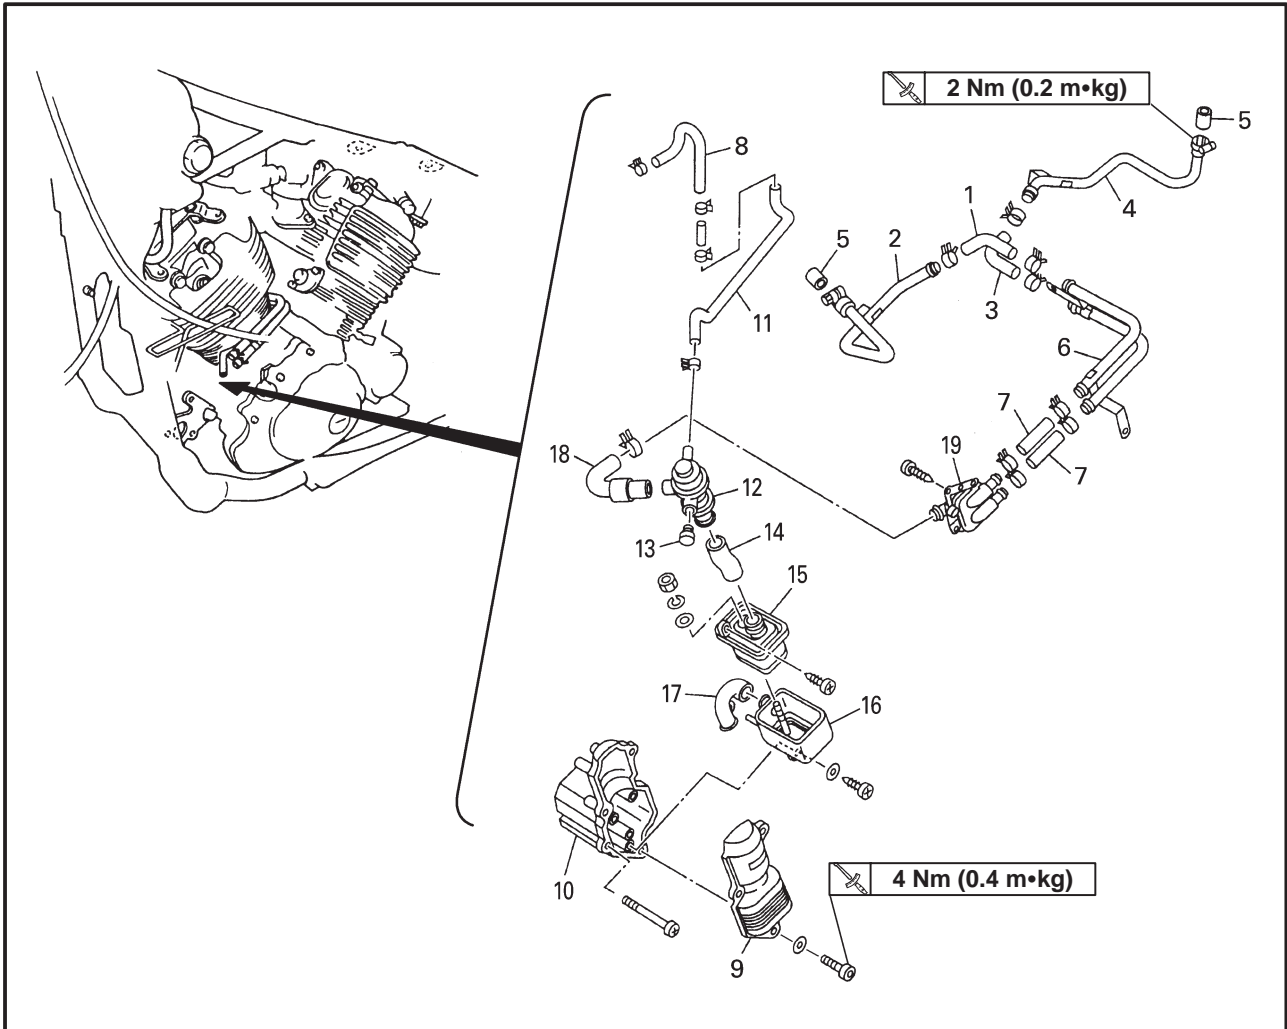

Order	Job/Part	Q'ty	Remarks
9	Cover	1	For installation, reverse the removal procedure.
10	Cover	1	
11	Vacuum hose 1	1	
12	Air cut valve	1	
13	Plug	1	
14	Air cut valve to air cleaner hose	1	
15	Air cleaner	1	
16	Air Cleaner case	1	
17	Bend hose	1	
18	Air cut valve to reed valve hose	1	
19	Reed valve	1	






EAS00510

## CHECKING THE AIR INDUCTION SYSTEM


### 1. Check:

- hoses  
Loose connection → Connect properly.  
Cracks/damage → Replace.
- pipes  
Cracks/damage → Replace.

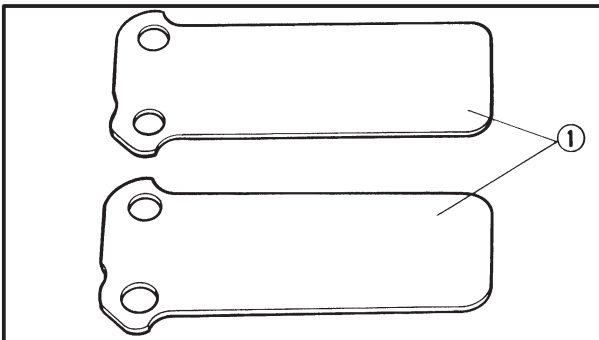

### 2. Check:

- reed valve ①
- reed valve stopper
- reed valve seat  
Cracks/damage → Replace the reed valve.

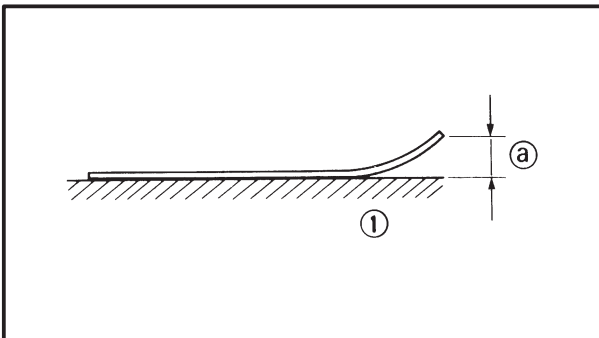

### 3. Measure:

- reed valve bending ②  
Out of specification → Replace the reed valve.




**Maximum reed valve bending  
0.4 mm**

① Surface plate


### 4. Check:

- air cutoff valve  
Cracks/damage → Replace.

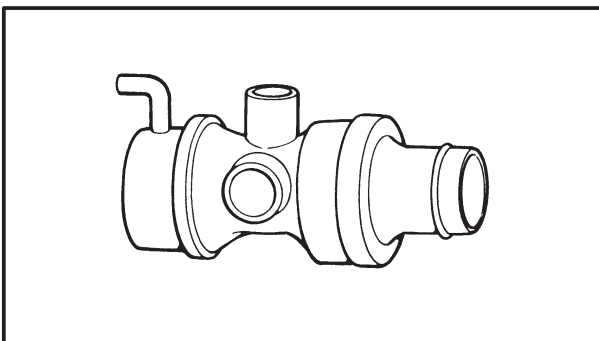


### 5. Check:

- air cleaner  
Cracks/damage → Replace.  
Clogged → Clean.

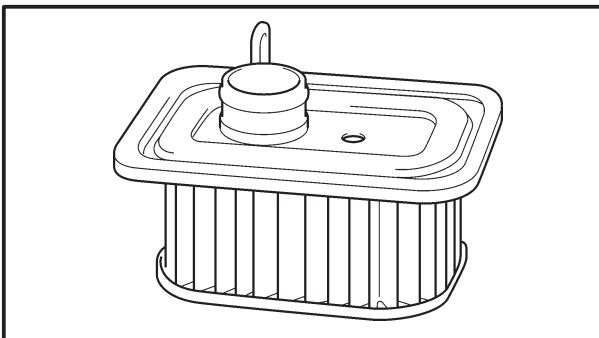

CHASSIS

FRONT BRAKE  
FRONT BRAKE PADS



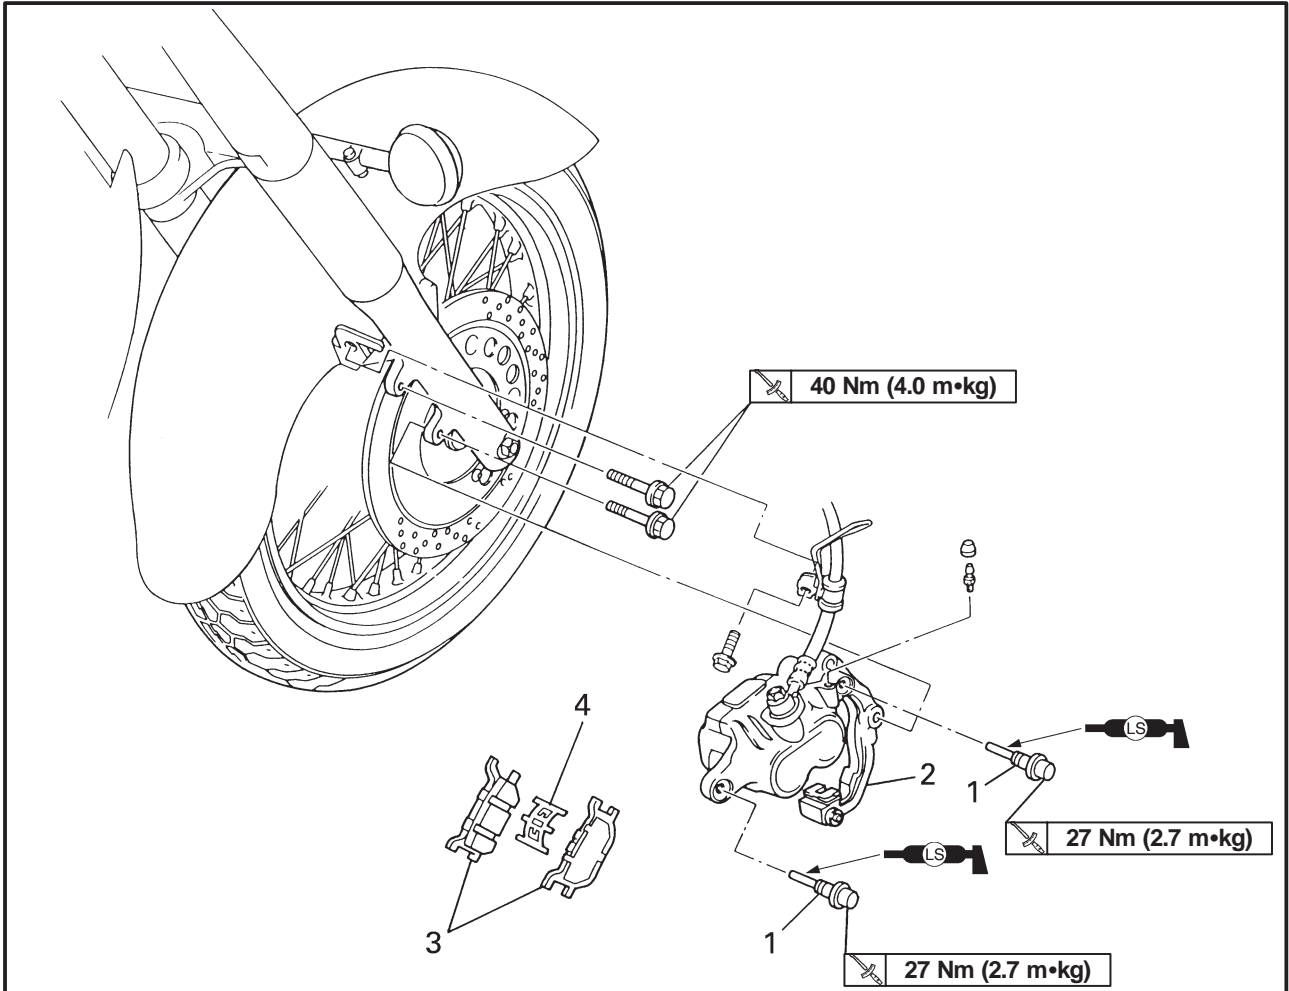


Order	Job/Part	Q'ty	Remarks
	<b>Front brake pad removal</b>		
1	Retaining bolt	2	Remove the parts in the order below.
2	Brake caliper	1	
3	Brake pads	2	
4	Pad spring	1	
			Refer to "BRAKE PAD REPLACEMENT".
			For installation, reverse the removal procedure.

**CAUTION:**

Disc brake components rarely require disassembly. **DO NOT:**

- disassemble components unless absolutely necessary;
- use solvents on internal brake components;
- use spent brake fluid for cleaning; (use only clean brake fluid)
- allow brake fluid to come in contact with the eyes, as this may cause eye injury;
- splash brake fluid onto painted surfaces or plastic parts, as this may cause damage;
- disconnect any hydraulic connection, as this would require the entire brake system to be disassembled, drained, cleaned, properly filled and bled after reassembly.

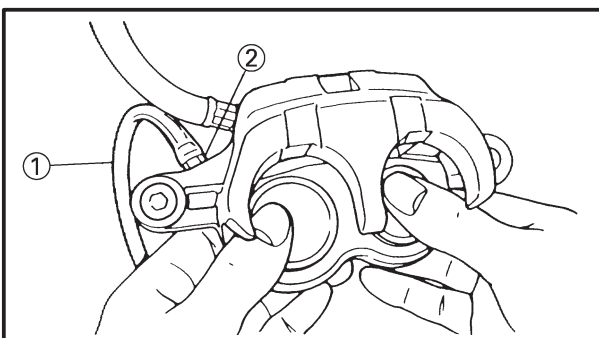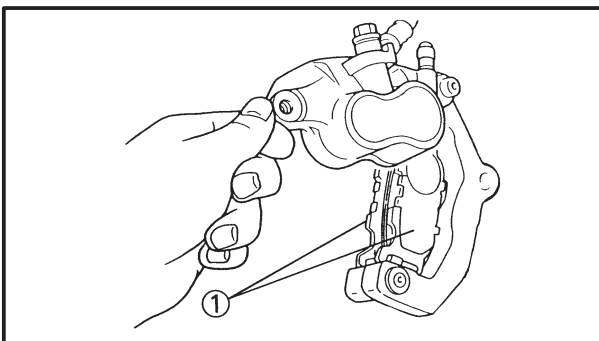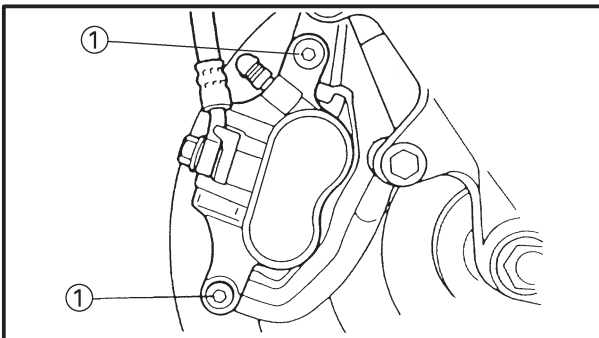**BRAKE PAD REPLACEMENT****NOTE:**

It is not necessary to disassemble the brake caliper and brake hose to replace the brake pads.

1. Remove:
  - Retaining bolt ①

2. Remove:
  - Brake pads ①

**NOTE:**

- Install new brake pad springs when the brake pads have to be replaced.
- Replace the brake pads as a set if either is found to be worn to the wear limit.

3. Install:
  - Brake pads
  - Brake pads spring

\*\*\*\*\*


**Installation steps:**



- Connect a suitable hose ① tightly to the brake caliper bleed screw ②. Put the other end of this hose into an open container.

- Loosen the brake caliper bleed screw and using a finger push the caliper pistons into the brake caliper.
- Tighten the brake caliper bleed screw ②.

 **Brake caliper bleed screw:**  
6 Nm (0.6 m•kg)

- Install new brake pads and a new brake pad spring.
- Install the brake caliper ③ and retaining bolt ④.

 **Bolt (brake caliper):**  
40 Nm (4.0 m•kg)  
**Retaining bolt:**  
27 Nm (2.7 m•kg)

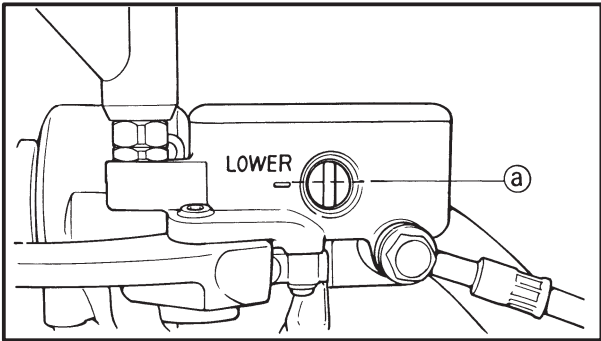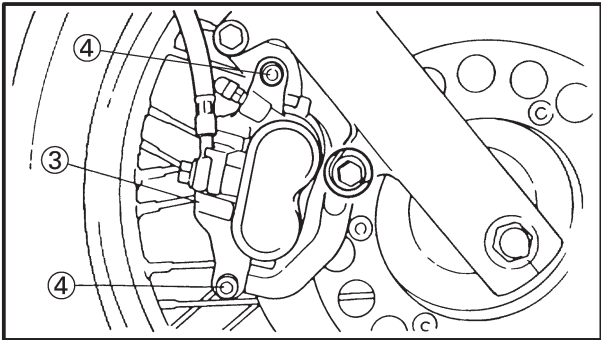


\*\*\*\*\*

4. Check
  - Brake fluid level  
Refer to “BRAKE FLUID LEVEL INSPECTION” in CHAPTER 3.
  - ① “LOWER” level line

5. Check:
  - Brake lever operation  
Soft or spongy feeling → Bleed the brake system.  
Refer to “AIR BLEEDING (HYDRAULIC BRAKE SYSTEM)” in CHAPTER 3.



FRONT BRAKE CALIPER

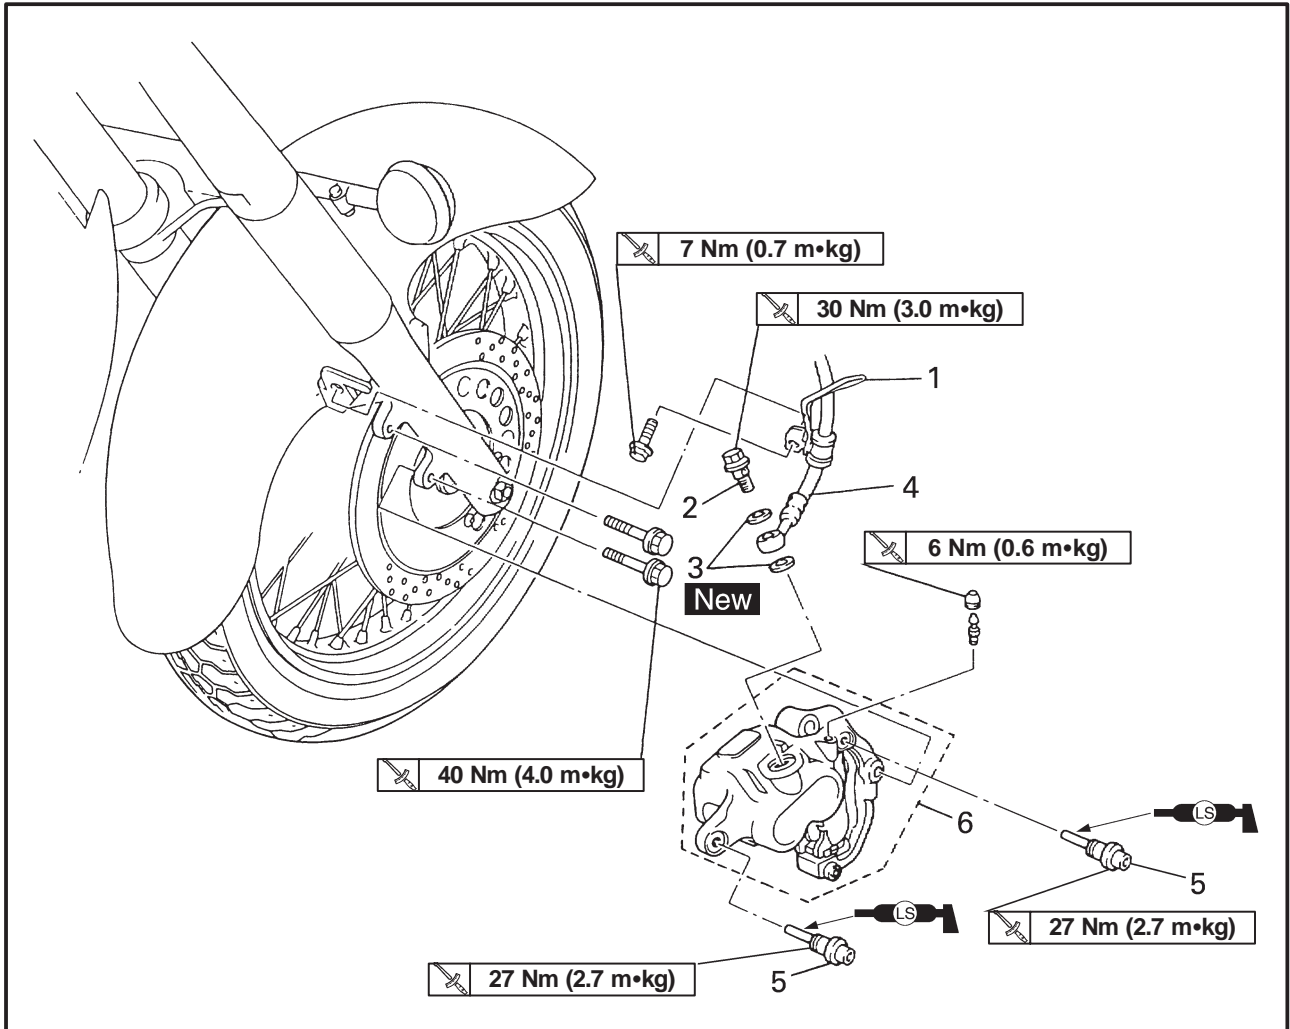

Order	Job/Part	Q'ty	Remarks
	<b>Front brake caliper removal</b>		Remove the parts in the order below.
	Brake fluid		Drain
1	Brake hose holder	1	Refer to "CALIPER INSTALLATION".
2	Union bolts	1	
3	Copper washers	2	
4	Brake hose	1	
5	Retaining bolt	2	
6	Brake caliper assembly	1	
			For installation, reverse the removal procedure.

## FRONT BRAKE

CHAS

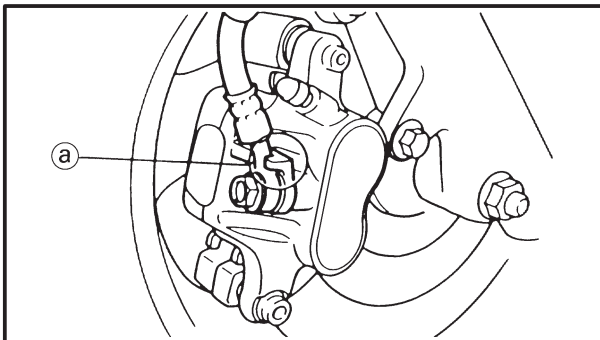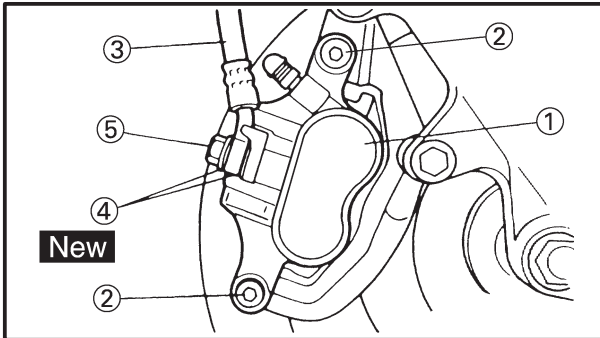

### CALIPER INSTALLATION

1. Install:

- Brake caliper ①
- Retaining bolt ②
- Brake hose ③
- Copper washers ④
- Union bolt ⑤

27 Nm (2.7 m•kg)

**New**

30 Nm (3.0 m•kg)

### CAUTION:

When installing the brake hose on the brake caliper, make sure that the brake pipe touches the projection ① on the brake caliper.

### ⚠ WARNING

Proper brake hose routing is essential to insure safe motorcycle operation. Refer to "CABLE ROUTING".

2. Fill:

- Brake reservoir



Recommended brake fluid:  
DOT 4


### CAUTION:

Brake fluid may damage painted surfaces or plastic parts. Always clean up spilled brake fluid immediately.

### ⚠ WARNING

- Use only the designated quality brake fluid: other brake fluids may deteriorate the rubber seals, causing leakage and poor brake performance.
- Refill with the same type of brake fluid: mixing brake fluids may result in a harmful chemical reaction and lead to poor brake performance.
- Be careful that water does not enter the master cylinder when refilling. Water will significantly lower the boiling point of the brake fluid and may result in vapor lock.

3. Air bleed
- Brake system  
Refer to “AIR BLEEDING (HYDRAULIC BRAKE SYSTEM)” in CHAPTER 3.


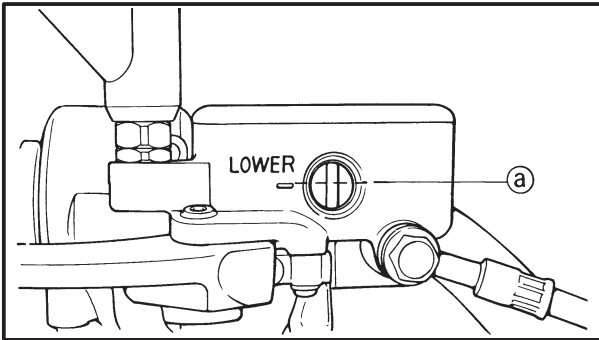


4. Check:
- Brake fluid level  
Brake fluid level is under the “LOWER” level line → Fill up.  
Refer to “BRAKE FLUID LEVEL INSPECTION” in CHAPTER 3.
- Ⓐ “LOWER” level line





# XVS650A 2001 WIRING DIAGRAM

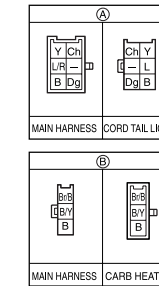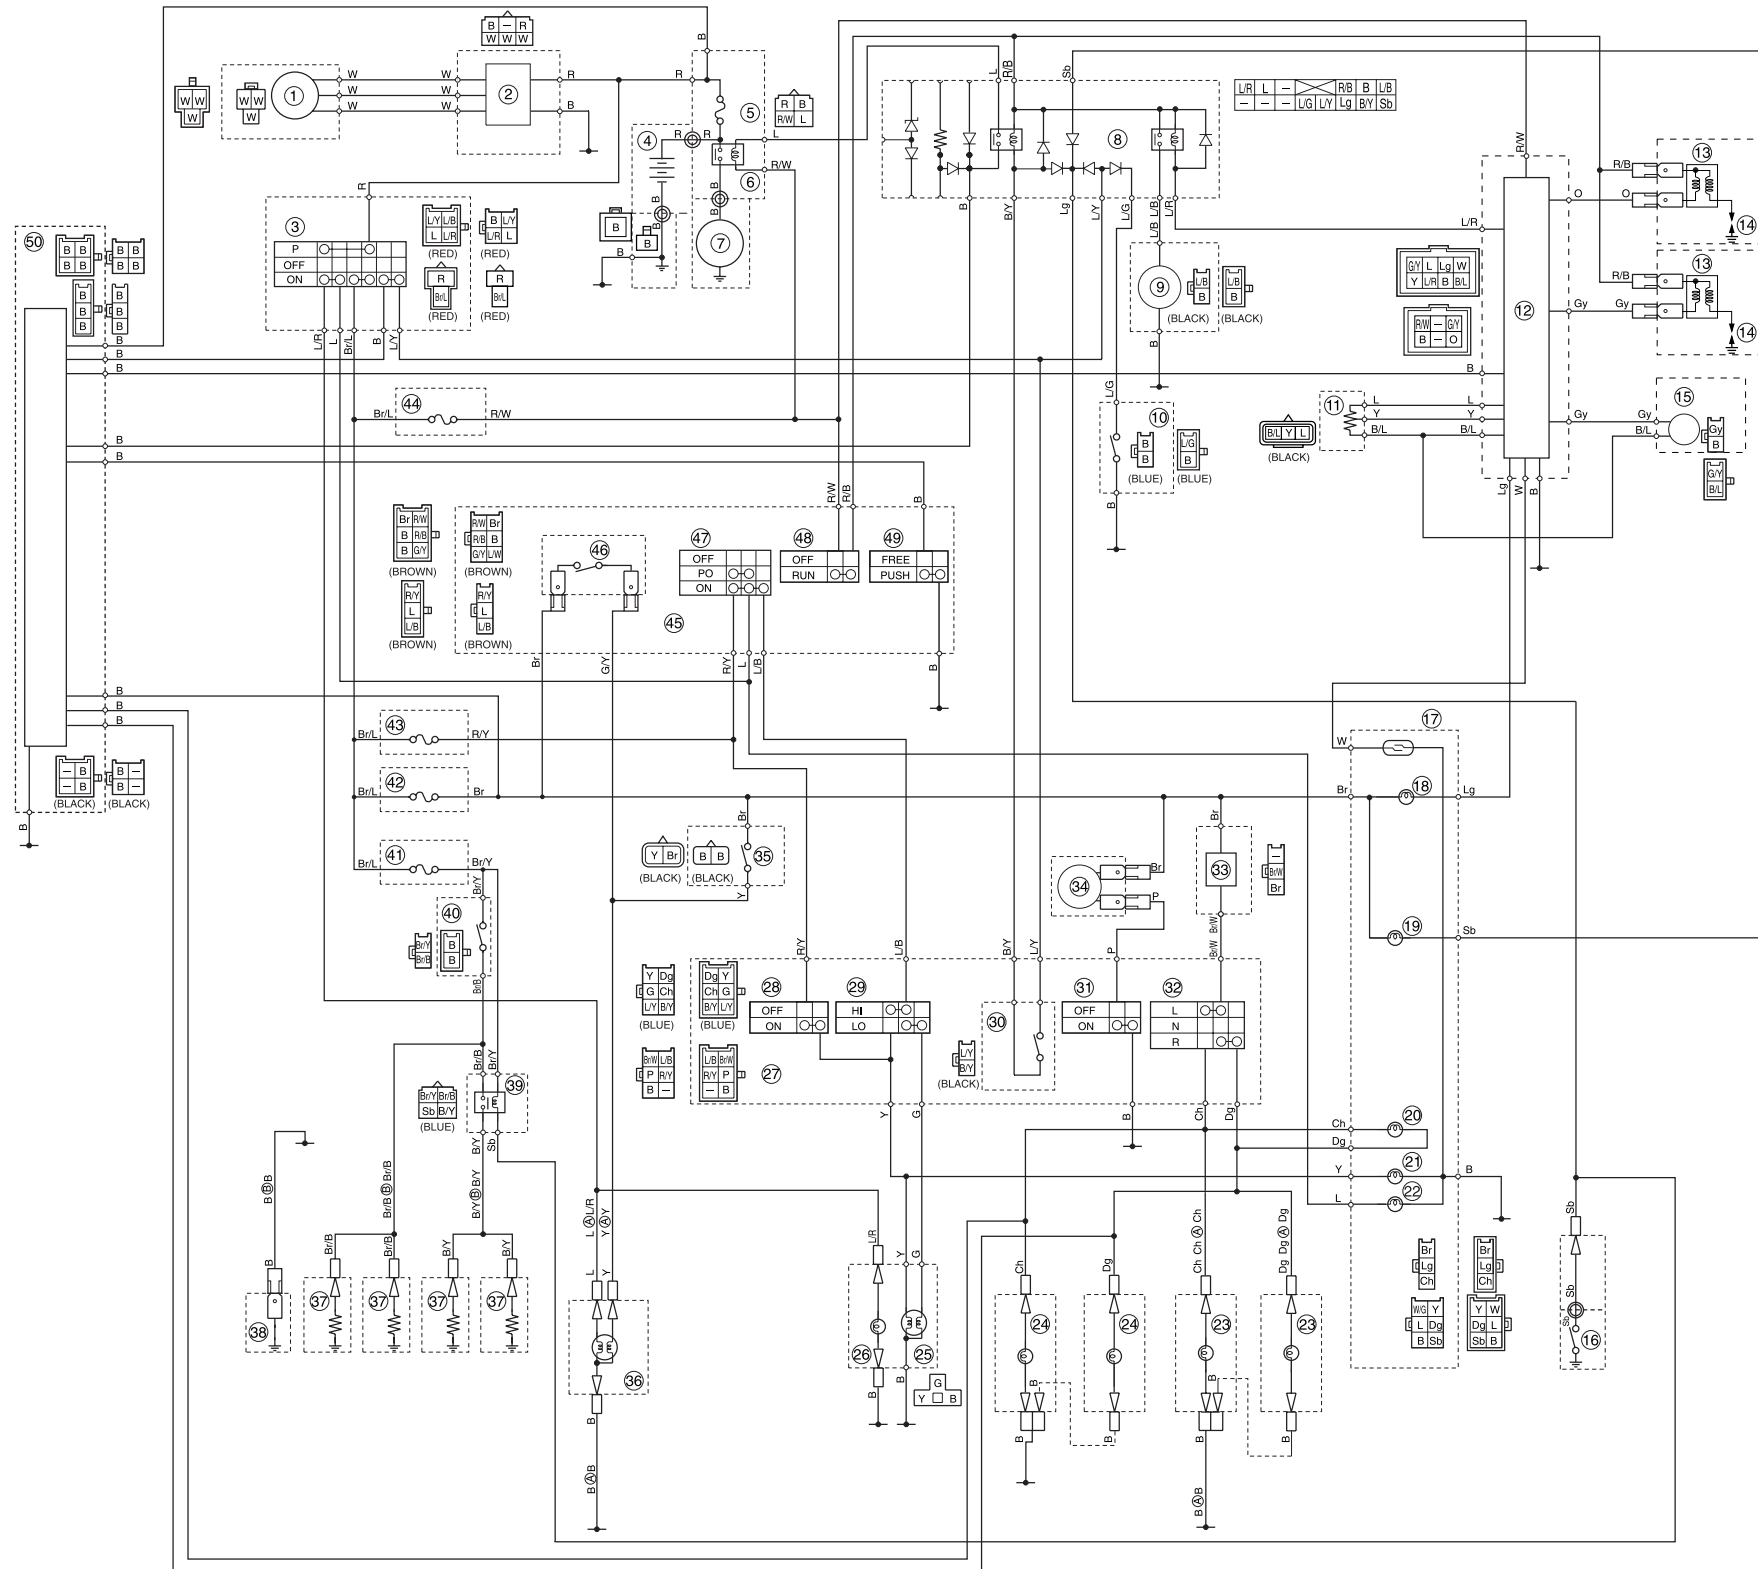

- ① A.C. magneto
- ② Rectifier/regulator
- ③ Main switch
- ④ Battery
- ⑤ Main fuse
- ⑥ Starter relay
- ⑦ Starter motor
- ⑧ Relay unit
- ⑨ Fuel pump
- ⑩ Sidestand switch
- ⑪ Throttle position sensor (TPS)
- ⑫ Ignitor unit
- ⑬ Ignition coil
- ⑭ Spark plug
- ⑮ Pickup coil
- ⑯ Neutral switch
- ⑰ Meter assembly
- ⑱ Engine indicator light
- ⑲ Neutral indicator light
- ⑳ Turn indicator light
- ㉑ High beam indicator light
- ㉒ Meter light
- ㉓ Rear turn signal
- ㉔ Front turn signal
- ㉕ Headlight
- ㉖ Auxiliary light
- ㉗ Left handlebar switch
- ㉘ Pass switch
- ㉙ Dimmer switch
- ㉚ Clutch switch
- ㉛ Horn switch
- ㉜ Turn switch
- ㉝ Flasher relay
- ㉞ Horn
- ㉟ Rear brake switch
- ㊱ Tail/brake light
- ㊲ Carburetor heater
- ㊳ Carburetor heater earth
- ㊴ Carburetor heater relay
- ㊵ Thermo switch
- ㊶ Carburetor heater fuse
- ㊷ Signal system fuse
- ㊸ Headlight fuse
- ㊹ Ignition fuse
- ㊺ Right handlebar switch
- ㊻ Front brake switch
- ㊼ Lights switch
- ㊽ Engine stop switch
- ㊾ Start switch
- ㊿ Alarm system (Option)

## COLOR CODE

B . . . . . Black	L . . . . . Blue	W . . . . . White	Br/L .. Brown/Blue	L/W .. Blue/White
Br .... Brown	Lg .... Light green	Y . . . . . Yellow	Br/W . Brown/White	L/Y ... Blue/Yellow
Ch ... Chocolate	O .... Orange	B/L ... Black/Blue	Br/Y .. Brown/Yellow	R/B... Red/Black
Dg ... Dark green	P . . . . . Pink	B/W .. Black/White	G/Y .. Green/Yellow	R/W .. Red/White
G .... Green	R . . . . . Red	B/Y ... Black/Yellow	L/B ... Blue/Black	R/Y... Red/Yellow
Gy ... Gray	Sb .... Sky blue	Br/B .. Brown/Black	L/R ... Blue/Red	